

Customer Name : elarabygroup
Reference : PKTVTOMPR0490
Issue Date : 3-9-2024

Colors: 1
Pro. Layer: 28page
Designer: George

Int. Size: L: W: 14.8cm H: 21cm
Colors: Process Pantone

Paper

70g

TORNADO

OWNER MANUAL

دليل المالك

LED TV Product

منتج تلفزيون ليد

ES4600E

ES4600G

ES4600X

ES4600E-A

ES4600G-A

ES4600X-A

Chapter 1: Introduction

Precautions	3
- Product	3
- Power and Plug	3
- Power Cord and Signal Cable	3
- Use Environment	3
- Cleaning	3
- Hanging the Apparatus on the Wall	3
- Batteries	3
- Apparatus Exterior Appearance.....	4
Buttons on the Apparatus	4
Sockets	4
Remote Control Functions	5

Chapter 2: Connections and Setup

Switching On	6
Switching Off	6

Chapter 3: General Operation

Menu Function	7
- Network	7
- Picture	7
- Sound	8
-Time	9
- Option	9
- Lock	9
- Advanced option.....	9
- Clock Mode.....	9
- Subtitle	10
- Automatic standby	10
- Advanced Features	10
- Channel Tunning	10
- Media	11
- Coolink app	11

Chapter 4: Advanced Functions

Attention and Frequently Asked Questions	12
Reference section	12

Chapter 5: Other Information

Troubleshooting	13
Base Installation	13
Accessories	13
Important Notes.....	14

Chapter 6: Instruction

Important Instruction	14
-----------------------------	----

Chapter 7: Installation Guide

Installation Guide shield	14
---------------------------------	----

Life Time

ELARABY is committed inside Arab Republic of Egypt to provide maintenance and spare parts after the warranty period by a cost for 1 year.

Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all maintenance to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the apparatus screen.
- Do not impact the apparatus screen with hard pressure as this may damage the apparatus screen severely.

Power and Plug

- Unplug the set under the following conditions:
 - If the set will not be used for a long period of time.
 - If the power cord or the power outlet/plug is damaged.
- Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
- If the set is subject to impact or has been dropped to have the cabinet damaged.
- Where the mains plug or an appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.

Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

Use Environment

- Do not place the set on an unstable cart, stand or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp and cold areas. Protect the set from overheating.
- Keep the set away from direct sunlight.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids such as vases shall be placed on the apparatus.
- Do not use the set near dust place.

Cleaning

- Dust the set by wiping the screen and the cabinet with soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the apparatus screen.

Hanging the Apparatus on the Wall


Warning: This operation requires two people.

To ensure a safe installation, observe the following **safety notes:**

- Check that the wall can support the weight of the apparatus set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The apparatus must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the apparatus cables are placed so that there is no danger of tripping over them. All other safety instructions about our apparatuses are also applicable here.

Warning: To prevent injury, this apparatus must be securely attached to a stable surface/ Wall in accordance with the installation instructions. Install the TV in a horizontal, stable location.

- To secure the TV, use a sturdy strap from the Hook(s) on the rear of the TV to a wall stud, pillar or other immovable structure. Make sure the strap is tight, secure, and parallel to the floor.
- Never stand or climb on the TV. Educate children about the dangers of climbing on furniture to reach the TV or its controls. Be especially careful in households with children to prevent them from climbing on top of the TV. It may move, fall over, break, become damaged or cause an injury.

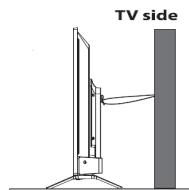


Batteries

- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Remove batteries when the remote control is not to be used for a long time. Batteries left in equipment may cause damage through deterioration and corrosive leakage, invalidating the guarantee.
- Risk of explosion if batteries are replaced by an incorrect type. Replace only with the same or equivalent type recommended by the equipment manufacturer.
- To protect the environment use local recycling facilities for battery disposal. Dispose of used batteries according to the instructions.

Apparatus Exterior Appearance

Note: The actual exterior of the apparatus may vary from image on the carton box, according to the apparatus model.

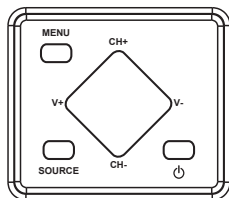32ES4600E & 43ES4600E**MENU button**

Press it to display menu.

CH+/- button

Navigates up/down through the channel list.

V+/- button

Increases/decreases the volume.

SOURCE button

Press it to change input source.

⏻ button

- The apparatus is at ON mode .
- Press it for turning the apparatus to Standby mode.
- The apparatus is on Standby mode
- Press it for turning the apparatus to On mode.

Sockets

Note: The location and names of the sockets on the apparatus may vary according to apparatus model and some sockets may not be available for some models.

AV IN

This socket can be used to connect a device such as video recorders, camcorders, decoders, satellite receivers, DVD players or games consoles. It provides composite video connection.

USB

This socket can be used to connect an USB device.

ANT IN (RF)

This socket can be used to receive the signal from your VHF/UHF antenna.

HDMI (High-Definition Multimedia Interface)

This socket can be used to connect a device such as Blu-ray player with a HDMI output for best picture quality. It also provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable. Mini-plug cable.

RJ45 (LAN)

Connect an Ethernet cable to access a network or the Internet.

EARPHONE OUT

This socket can be used for connecting earphones to listen to the sound coming from the apparatus.

Note: Excessive sound pressure from earphones can Cause hearing loss.

DIGITAL AUDIO OUT

Use an Coaxial cable to Output your TV Audio signal to a compatible Audio Receiver



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



1. POWER ()

Turn on the TV , or turn the TV to fastboot / standby mode .

2. MUTE () Mute or Restore the TV Sound

3.Navigation Buttons (UP/Down/LEFT/RIGHT)

Navigate the menu to select the content you need, or
 • Press UP/DOWN button to change channels.

4. OK

Confirm, enter or execute the selected item, or access the channel list.

5. S.MENU : Access the system function (coolink -history-Media-CAST-Search-Notifications)

Access Quick Menu (Channel setting, Picture Mode , Sound Mode ,Aspect Ratio , Sleep Timer ,Audio Language , Subtitle Language , TEXT , AD , ... Setup)
 - Long Press on S.MENU Button to access the Virtual Key-Board.

6. Back : Return to Upper-Level Content or Exit the Current Screen

7. Volume Down : Decrease the sound level

8. Volume UP : increase the sound level

9 . Home : Access the Home Screen

10. Source : Access the source Menu

11. Browser : Access the Browser App.

12.YouTube : Access the YouTube APP.

13. Prime Video : Access the Prime Video App

Switching On

Follow the instructions on this page on how to switch on your apparatus and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two **AAA** batteries in the remote control.

Precautions on using batteries:

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.

2. Connect the power cable first to the apparatus then to a mains socket. Your apparatus set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, don't use it under any circumstances and don't connect it to a mains socket as there is a risk of electric shock.

3. Connect an outside aerial to the ANTENNA socket at the back of the TV set. The aerial socket (75 OHM - VHF / UHF / cable) can be used for connecting an external aerial or other equipment fitted.

4. When powered on, the apparatus will be turned on directly or be in standby. If the power indicator lights up red, the apparatus is in standby mode.

Press the **⏻** button on the remote control or on the apparatus to turn on the apparatus.

Switching Off


- To put the apparatus into standby mode, press the **⏻** button on the remote control, on the apparatus
- Press **⏻** to display Virtual Menu on the apparatus Can use keypad keys **P** **^** / **v** button, the apparatus remains powered up but with low energy consumption.
- To switch off the apparatus, unplug the mains socket from the mains outlet.

Setup Wizard


The system setting will appear when you open the TV on the first time. Please set according to the on-screen guide.

Press OK button to start the setup.

Press **▼** / **▲** button to select the language and press OK button to turn to next page.

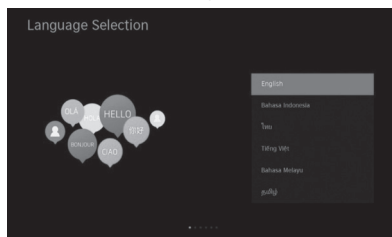


Press **▼** / **▲** button to select Country and press OK button to turn to next page.

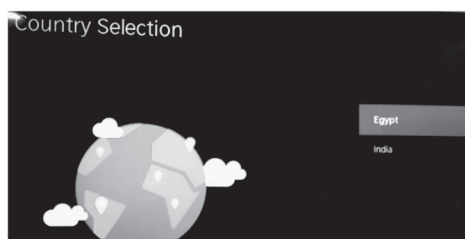


Press **▼** / **▲** button to select Time Zone and press OK button to turn to next page



Press **▼** / **▲** button to select Environment and press OK button to turn to next page.

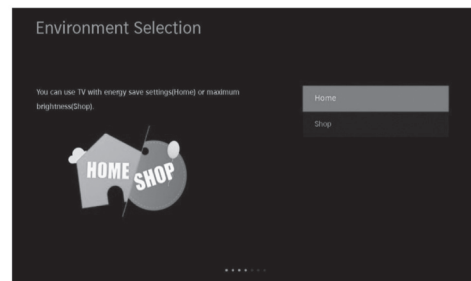


Select and agree the agreement, then select "Next" button to the next page.

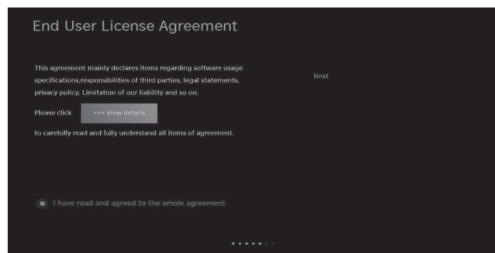

Press ▼ / ▲ button to select Network and press OK button to turn to next page.



Select "Accept" to agree to the Terms of Use & Privacy Policy, and then choose to enable specific additional service above by individually selecting.

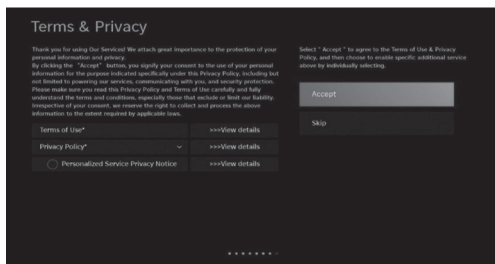

Press ▼ / ▲ button to select TV source and scan channel.

Press ▼ / ▲ / ◀ / ▶ button to select input on the Home page.

Press ▼ / ▲ button to select ATV/DVB-C/DVB-T/T2/AV1/AV2/HDMI1/HDMI2. Or Press input button, and press ◀ / ▶ button to select Source.

Press ▼ / ▲ button to select the input source you want. Press OK button to enter. Press EXIT button to quit.

Setup

Press MENU button to enter the Setup.

Press ◀ / ▶ button to highlight the desired menu icon, and press OK button to select.

(Optional: Network Settings/Image Settings/Sound Settings/General Settings/About This Device)

Network Settings

Press MENU button to enter the main menu.

Press ▼ / ▲ button to select Network Settings.

Press OK button to enter the sub-menu.

Press ▼ / ▲ button to select Wired Connection / Wireless Connection / Network Status / Data Saver. Press OK button to enter sub-menu and setup.

Image Settings

Press MENU button to enter the main menu.

Press ▼ / ▲ button to select Image Settings.

Press OK button to enter the sub-menu.

with hairing impaired on/off.

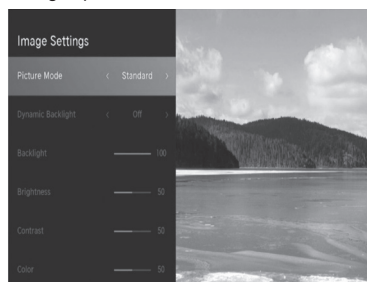



Image Settings

Press MENU button to enter the main menu.

Press ▼ / ▲ button to select Image Settings.

Press OK button to enter the sub-menu.

Press OK button to enter the sub-menu

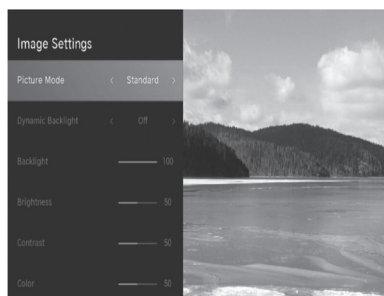

Picture Mode

Highlight the item and press OK button to enter the sub-menu, that shows the picture mode you can choose.

Press ◀ / ▶ button to select Standard/Dynamic/Soft/Vivid/User.

Vivid Enhance the contrast, color and clarity of the screen to make the color more vivid.

Eco Reduce screen brightness, improved contrast for energy saving.

Movie This mode is more suitable for watching movies.

Game This mode is more suitable for playing games.

Sport This mode is more suitable for sport programs.

User Select to customize picture settings.

button to select Backlight.

Press ◀ / ▶ button to adjust.

Brightness/Contrast/Color/Tint/Sharpness.

Press ◀ / ▶ button to adjust.

Contrast Adjust the contrast of the image.

Brightness Adjust the brightness of the image.

Color Adjust the color intensity of the image.

Sharpness Adjust the edge sharpness of the image.

Color Temperature

Adjust the overall color of the image.

Press ▼ / ▲ button to select Color Temperature.

Press ◀ / ▶ button to select Standard/Warm/User/Cool.

Standard The picture does not in favor of any color. The color is moderate.

Warm The picture is in favor of red-green and less blue to make the color more vivid and soft.

User The picture is in favor of green-blue and less red

The whole color is in favor of light. The picture is more fresh and elegant.

R Gain/G Gain/B Gain

These terms are available only

when "User" is selected in color temperature.

Press ▼ / ▲ button to select R Gain/G Gain/B Gain.

Press ◀ / ▶ button to adjust.


aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio.

Press ◀ / ▶ button to select 16 : 9 / 4 : 3 / Auto/ Movie.

Advanced Option

Press ▼ / ▲ button to select Advanced Option

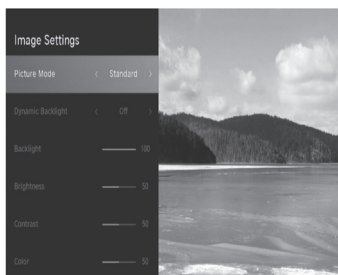

Noise Reduction

Press ▼ / ▲ button to select Noise Reduction.

Press ◀ / ▶ button to select Off/ Low/ Middle/ High/ Auto.

MPEG Noise Reduction

Press ▼ / ▲ button to select MPEG Noise Reduction.

Press ◀ / ▶ button to select On/ Off.

Local Contrast

Press ▼ / ▲ button to select Local Contrast.

Press ◀ / ▶ button to select Off/ Low/ Middle/ High.

Dynamic Contrast

Press ▼ / ▲ button to select Dynamic Contrast.

Press /button to select Off/ Low/ Middle/ High

Eye Protection


Press ▼ / ▲ button to select Eye Protection.

Press /button to select On/ Off.

Picture Reset

Press ▼ / ▲ button to select Picture Reset.

Press ◀ / ▶ to select reset or not.

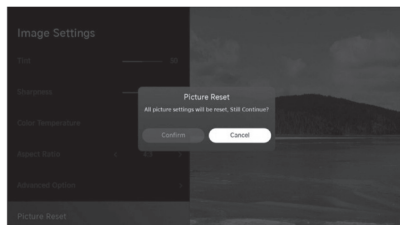


Sound Settings

Press MENU button to enter the main menu.

Press ▼ / ▲ button to select the Sound.

Press OK button to enter the sub-menu.

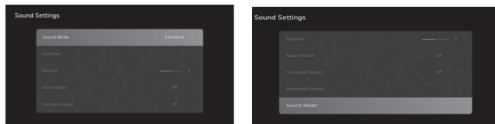

Press ▼ / ▲ button to select Sound Mode/Equalizer/ Balance/Auto Volume/Surround Sound/ Advanced Option/ Sound Reset.

Press MENU or EXIT button to quit.

Sound Mode

Press ▼ / ▲ button to select Sound Mode.

Press ◀ / ▶ button to select Standard/Soccer/Movie/ Music/User.

Standard Emit balanced sound under any circumstances.

Soccer Enhance the voice

Movie Enhances treble and bass for a rich sound experience.

Music Enhance the high pitch and reduce the bass.

User Select to customize sound settings.

Equalizer

Press ▼ / ▲ button on to select Equalizer.

Press OK button to enter sub-menu then press ◀ / ▶ button to adjust.

Balance

Balanced left and right channels.

Press ▼ / ▲ button to select Balance.

Press ◀ / ▶ button to adjust.

Auto Volume

Press ▼ / ▲ button to select Auto Volume.

Press ◀ / ▶ button to select On/Off.

Surround Sound


Press ▼ / ▲ button to select Surround Sound.

Press ◀ / ▶ button to select On/Off.

Advanced Option

Press ▼ / ▲ button to select Advanced Option.

Press OK button to enter sub-menu.

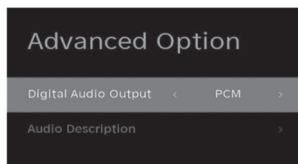

Digital Audio Output


Press ▼ / ▲ button to select Digital Audio Output. Press ◀ / ▶ button to select AUTO/PCM.

Audio Description


Press ▼ / ▲ button to select Audio Description.
Press OK button to enter sub-menu.

Sound Reset

Press ▼ / ▲ button to select Sound Reset.
Press ◀ / ▶ to select reset or not

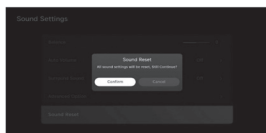


Press MENU button to enter the main menu.
Press ▼ / ▲ button to select the General settings.
Press OK button to enter the sub-menu.

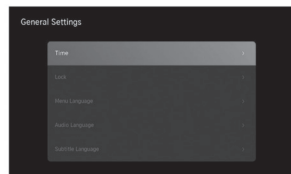

Time

Press MENU button to enter the main menu.
Press ▼ / ▲ button to select the Time.
Press OK button to enter the sub-menu.

Press ▼ / ▲ button to select Clock Mode/Year/Month/Date/ Hour/Minute/Time Zone/ Summer Time/Sleep Timer/Auto-
matic Standby
Press MENU or EXIT button to quit.

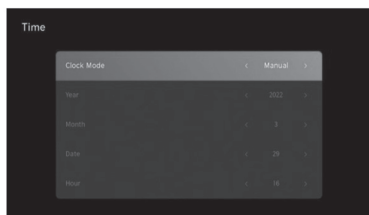

Clock Mode

Press ▼ / ▲ button to select Clock Mode.
Press ◀ / ▶ button to select Auto/Manual.
Year/Month/Date/Hour/Minute are only available when
Clock Mode setting "Manual".
Time Zone
Press ▼ / ▲ button on to select Time Zone.

Summer Time

Press ▼ / ▲ button to select Summer Time. Press ◀ / ▶
button to select On/Off.


Sleep Time

Press ▼ / ▲ button to select Sleep Time. Press ◀ / ▶
button to select

Off/10 Minutes/20 Minutes/30 Minutes/60 Minutes/90 Min-
utes/120 Minutes/180 Minutes/240 Minutes.

Automatic Standby

Press ▼ / ▲ button to select Automatic Standby. Press ◀ /
▶ button to select Off/4 Hours/6 Hours/8 Hours.

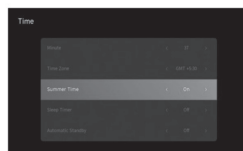

Lock

Press MENU button to enter the main menu.
Press ▼ / ▲ button to select Lock.
Press OK button to input password to enter the sub-menu.
(Default password is 0000)



Press ▼ / ▲ button to select Lock System/Set Password/
Parental Guidance.

Lock System

Press ▼ / ▲ button to select Lock System.
Press ◀ / ▶ button to select On/Off.

Set Password

Press ▼ / ▲ button to select Set Password.
Press OK button to set Password.

Parental Guidance

Press ▼ / ▲ button to select Parental Guidance.
Press ◀ / ▶ button to select Off/4~18.

Menu Language


Press ▼ / ▲ button to select Menu Language.

Audio Language

Press ▼ / ▲ button to select Audio Language.
Press OK button to enter sub-menu and press ▼ / ▲
button to select Primary/Secondary.

Subtitle Language


Press ▼ / ▲ button to select Subtitle Language.
Press OK button to enter sub-menu.

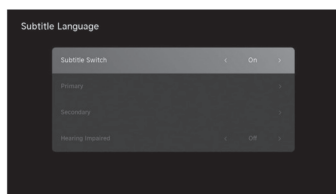

Subtitle Switch

Press ▼ / ▲ button to select Subtitle Switch.
Press ◀ / ▶ button to select On/Off
Primary
Press ▼ / ▲ button to select Primary. Press OK button to enter sub-menu.
Secondary
Press ▼ / ▲ button to select Secondary. Press OK button to enter sub-menu.
Hearing Impaired
Press ▼ / ▲ button to select Hearing Impaired
Press ◀ / ▶ button to select On/Off.

Link

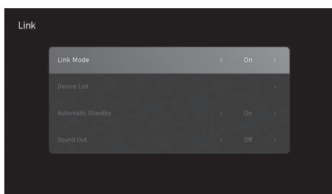

Press ◀ / ▶ button to select On/Off.
The following terms are available only when "On" is selected in Link Mode.

Device List

Press ▼ / ▲ button to select Device List.
Press OK button to enter sub-menu.

Automatic Standby



Press ▼ / ▲ button to select Automatic Standby.
Press ◀ / ▶ button to select On/Off.

Sound Out

Press ▼ / ▲ button to select Sound Out.
Press ◀ / ▶ button to select On/Off.

Advanced Option

Press ▼ / ▲ button to select Advanced Option
Press OK button to enter the sub-menu.

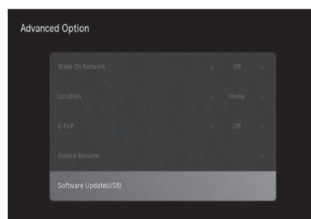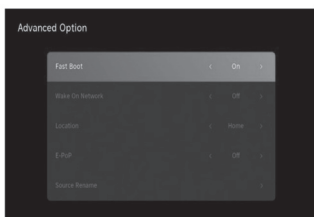

Press ▼ / ▲ button to select Fast Boot/Wake On Network/Location/E-PoP/Source Rename/ Software Update(USB).

Fast Boot

Press ▼ / ▲ button to select Fast Boot, and press ◀ / ▶ button to select On/Off.

Wake On Network

Press ▼ / ▲ button to select Wake On Network, and press ◀ / ▶ button to select On/Off.

Location

Press ▼ / ▲ button to select Location, and press ◀ / ▶ button to select Home/Shop.

E-PoP

Press ▼ / ▲ button to select E-PoP, and press ◀ / ▶ button to select On/Off.

Source Rename


Press ▼ / ▲ button to select Source Rename, and press OK button to enter sub-menu.

Software Update(USB)

Press ▼ / ▲ button to select Software Update(USB), and press OK button to setup.


Restore Default


Recall the default setting.
Press ▼ / ▲ button to select Restore Default.
Press OK button to restore

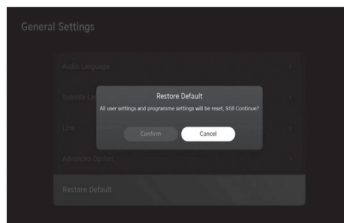

About This Device


Press MENU button to enter the main menu.
Press ▼ / ▲ button to select About this device.
Press OK button to enter the sub-menu.

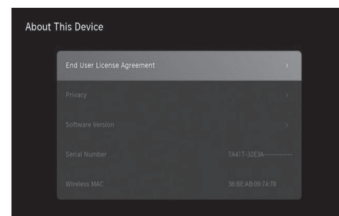

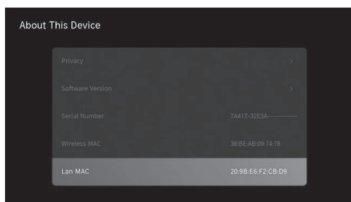

Channel setting

Press MENU button to enter the main menu.
Press ▼ / ▲ button to select Channel setting.
Press OK button to enter the sub-menu.

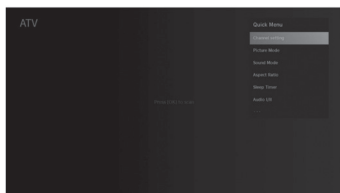

Tuning

Press ▼ / ▲ button to select Tuning. Press OK button to enter the sub-menu.



Auto Tuning

Automatic search can search for effective program channel automatically.

Press ◀ / ▶ button to select Auto Tuning, then press OK button to start auto search.

If you want to stop searching, press EXIT or MENU button to stop searching.



Manual Tuning

Analog manual search can search for effective simulation program channel manually.

Press ◀ / ▶ button to select Manual Scan, and press OK button to enter the sub-menu.

Press EXIT or MENU button to quit.



Frequency(KHz)

Press ▼ / ▲ button to select Frequency(KHz). Press ◀ / ▶ button to adjust.

Sound System

Press ▼ / ▲ button to select Sound System.

Press ◀ / ▶ button to select DK/BG/I/M.

Color System

Press ▼ / ▲ button to select Color System.

Press ◀ / ▶ button to select PAL/SECAM/NTSC/Auto.

Fine Tune(KHz)

Press ▼ / ▲ button to select Fine Tune(KHz).

Press ◀ / ▶ button to select the channel number.

Search

Press ▼ / ▲ button to select Search.

Press ◀ / ▶ button to select the Forward/Backward.

Media

Press ◀ / ▶ button to select Media on the Home page or press MEDIA button on the remote, and press OK button to enter the Media Center.

Movie

Press ◀ / ▶ button to select Movie, and press ▼ / ▲ / ◀ / ▶ button to select Movies. Press Menu button to display the Quick setting options on the right side.

Photo

Press ◀ / ▶ button to select Photo, and press ▼ / ▲ / ◀ / ▶ button to select photos. Press Menu button to display the Quick setting options on the right side.

Music

Press ◀ / ▶ button to select Music, and press ▼ / ▲ / ◀ / ▶ button to select musics. Press Menu button to display the Quick setting options on the right side.

For Sharing Mobile Content on The TV by App From Home Page

Select Coolink Tap

Please scan the barcode to download the App or Go to Play store to download it .

You can reach to this feature from source input .

You can share the mobile content too by embedded feature in the TV

Transfer mobile phone content via the device's streaming feature From the home page

Click the Source button, then System Function, then choose the Broadcast tab

Then choose the type of operating system for your mobile phone

Then choose

Start broadcasting

Note: Depending on the mobile phone model

Your TV may not support this function

The application may not be compatible with all mobile devices

Both devices must be connected to the same network
This feature works on the TV source

Attention and Frequently Asked Questions

Attention:

1. Some non-standard mobile storage device may not be recognized. Please change to use the standard device.
2. This system supports the following file formats: Movie format: AVI, MP4, MPG, MKV, MOV, DAT, VOB, RM & RMVB.

Music format: MP3, WMA, M4A & AAC.

Photo format: JPEG, BMP & PNG & MPO & GIF . Text format: .sud, .smi, ssa/.ass , srt, TXT.

Note: For coding files, there are many kinds nonstandard coding method, so this system can not be guaranteed to support the file formats using any coding method.

Frequently Asked Questions:

1. Under the following conditions, this system can't Decode the file and the file can't be play normally:
 - The parameters of file, such as the pixel of picture, Code rate of audio and video file or sampling rate of Audio file exceed the limit of the system.
 - The format of file isn't matched or the file is harmed.
2. Hot plug: Don't disconnection when the system is Reading or transmitting data to avoid damaging The system or the device.
3. Pay attention to the power supply of the device

When you are using a mobile hard disk or a digital Camera. If the power supply isn't sufficient or Not stable, you may encounter problems during Operating or can't operate at all. In this case, Please restart the device or unplug the device and Plug it again and ensure that its power supply is Normal.
4. The system supports standard USB1.1 and USB2.0

Devices such as standard USB disks, MP3 players, Mobile hard disks and etc..
5. For obtaining better audio and video quality,

Suggests to use the external device which accords With USB2.0 standard.
6. When playing the video with high compression ratio,

These phenomenons such as picture standstill and Menu long time response are normal.
7. For some USB device with power supply such as Large size hard disk, MP4 and etc., suggests using it With power to avoid electric power shortage.

Reference Section

32ES4600E / 32ES4600G / 32ES4600X	
Carton Dimensions (L*W*H) (mm)	830 x 120 x 520
Net Weight With Stand (Kg)	4.5
Gross Weight With Packaging (Kg)	5.7
Power Supply (V)	100 - 240
Power Consumption (TV On) (W)	55
Power Consumption (Standby) (W)	0.5
TV System	PAL, NTSC, SECAM
Sound Output Power (W)	2*8
Resolution	1366*768

43ES4600E / 43ES4600G / 43ES4600X	
Carton Dimensions (L*W*H) (mm)	1130 x 150 x 650
Net Weight With Stand (Kg)	7.6
Gross Weight With Packaging (Kg)	9.3
Power Supply (V)	100 - 240
Power Consumption (TV On) (W)	75
Power Consumption (Standby) (W)	0.5
TV System	PAL, NTSC, SECAM
Sound Output Power (W)	2*10
Resolution	1920*1080

Shield

32ES4600E-A & 32ES4600G-A & 32ES4600X-A)	
Net Weight With Stand (Kg) sheild models	6.5
gross weight with packing	7.7

43ES4600E-A & 43ES4600G-A & 43ES4600X-A)	
Net Weight With Stand (Kg) sheild models	11.9
gross weight with packing	13.99

Troubleshooting

Most problems you encounter with your apparatus can be corrected by consulting the following troubleshooting list.

No picture and no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

Remote control doesn't work

1. Change the batteries.
2. Batteries aren't installed correctly.
3. Main power isn't connected.

No picture and normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

Normal picture and no sound

1. Press the Vol+ button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Snowy dots and interference

If the antenna is located in the fringe area of the TV signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor or the outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

If the TV is crashed


1. Press the  button to turn off TV, then press the  button again to reset TV.
2. Unplug the power cord, then press the  button to reset TV.

Note: If these 2 methods can not be resolved, please contact the after-sales to solve.

Base Installation

Install the double support base on the apparatus by using screws.

Note: The below illustrations are for reference only and may differ from actual product appearance.

**Accessories**

The main accessories are

1. Operation Manual.
2. Remote Control.
3. Batteries.
4. Base.
5. Base Screws.

Note: The othe accessories may vary depending on the model and the region.

Important Instruction :

- ELARABY Group is not responsible if customer downloading or using any programs for Software upgrades from any unsupported resources.
- For Smart TV, Customer [Only] has the full responsibility when using any harmful or unlicensed programs .
- ELARABY Group is not responsible for any damage arising from the negligence of the instructions shown in Owner's Manual .
- ELARABY Group is not responsible for any damage arising from the misuse or the malfunctions while using the TV and its connected devices at the same time.
- Please read all instructions before operating the device. Keep these instructions well for future use.

Important Notes

- 1-The Browser Supports only one Tap .
- 2-The device's browser may not support some sites that contain automatic advertisements to maintain the security of the device's system.
- 3-There is another page for the letters.
- 4-TV Search Key-Board doesn't support Arabic Language when TV OSD in English Language .
- 5-The User Can Use YouTube App from Home or APP List or Hotkey in Remote Control not from the browser.
- 6-USB Dos-not Support ANSI Subtitle.

Chapter 7


Installation Guide

Dear Customer , to ensure your safety , you must follow the following instructions :

Note : these instructions are for mode **Shield ES4600E-A & ES4600G-A & ES4600X-A**


1 - Protection Screen

- This TV is designed to withstand shocks from the front of the TV as shown in image in Area (A) , This TV is designed to be impact resistant in Area (A) with a force of 4.5 N and load 100 kg pressure in the same area for one minute .
- Avoid receiving shocks on the side edges of the TV , Arrows (B) .

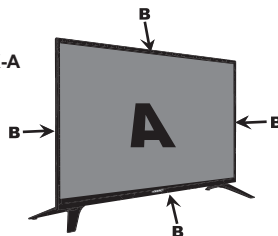**2 - Metal Tie**

After installing the bases , you must install the Metal Tie to protect the TV from falling for your safety .

- it's the shape of Metal Tie
- forming Metal Tie annularly as shown
- Install Metal Tie at back cover

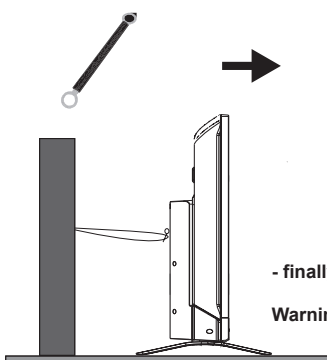

Screw specification 32" : M4*10 ,silver, pan head
Screw specification 43" : M6*10 ,silver, pan head

- finally connect the TV to the wall of this Metal Tie with a strong link .

Warning : failure to follow instructions carefully will get out the TV from warranty .

تعليمات هامة :

- شركة العربي غير مسؤولة عن تحميل أو استخدام العميل أي برامج تحديث (software) للتلفزيون من أي مصادر غير معتمدة .
- للأجهزة الذكية العميل مسؤول مسؤولية كاملة وحده عند استخدامه برامج ضاره أو غير مرخصة .
- لا تتحمل شركة العربي أي مسؤولية عن أي ضرر ناتج عن إهمال التعليمات الموضحة في دليل المالك. لا تتحمل شركة العربي أي مسؤولية عن أي ضرر ناتج عن سوء الاستخدام أو الأعطال من خلال استخدام هذا المنتج والأجهزة المتصلة به في نفس الوقت .
- برجاء قراءة جميع الارشادات قبل تشغيل الجهاز . حافظ على هذه الارشادات جيدا لاستخدامها فالمستقبل .
- بعض الموديلات، عندما يقوم العميل بحذف قناة من قائمة القنوات، تحذف القناة مع رقمها من القائمة هذا التصميم يساعد العميل في الإبقاء على أرقام جميع القنوات الأخرى بدون تعديل كما لو أن العميل لم يحذف أى قنوات أيضاً تم إضافة خاصية في بعض الموديلات، يتم تخزين القنوات التي تم حذفها حتى يتمكن العميل من استرجاعها إذا احتاج لذلك .

ملاحظات هامة

- ١- المتصفح يدعم أيقونة واحدة فقط
- ٢- المتصفح الخاص بالجهاز قد لا يدعم بعض المواقع التي تحتوي على اعلانات تلقائية وذلك للحفاظ على امن النظام الخاص بالجهاز
- ٣- في المتصفح يوجد صفحة ثانية للحروف
- ٤- في قائمة بحث الجهاز عندما تكون الإعدادات باللغة الإنجليزية لا توجد إمكانية لتغيير اللغة في قائمة البحث
- ٥- العميل بإمكانه استخدام تطبيق اليوتيوب من الصفحة الرئيسية أو من قائمة التطبيقات أو من زر لوحة التحكم وليس من المتصفح
- ٦- الترجمة بإمتداد ANSI على مدخل القرص الصلب لا تعمل

الفصل ٦

دليل التثبيت

عزيزي العميل لضمان سلامتك يجب عليك اتباع التعليمات التالية:

ملحوظة: هذه التعليمات خاصة بموديل (ES4600E-A & ES4600G-A & ES4600X-A Shield)



١- شاشة الحماية

- تم تصميم هذا التلفزيون لمقاومة الصدمات من مقدمة التلفزيون كما هو موضح في الصورة في منطقة (A)
- تم تصميم الجهاز ليكون مقاوما للصدمات في المنطقة (A) بقوة ٤,٥ نيوتن وحمل ضغط ١٠٠ كيلو جرام في نفس المنطقة لمدة دقيقة واحدة .
- تجنب تلقي الصدمات على الحواف الجانبية للتلفزيون ، الأسهم (B) .


٢- الرابطة المعدنية

بعد تثبيت القواعد ، يجب تثبيت الرابطة المعدنية لحماية التلفزيون من السقوط من أجل سلامتك.

- شكل الرابطة المعدنية
- تشكيل الرابطة المعدنية بشكل حلقي كما هو مبين
- تثبيت الرابطة المعدنية في الكابينة الخلفية للتلفزيون كما هو مبين

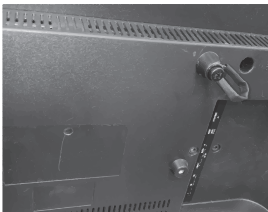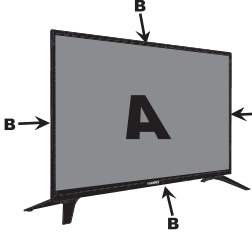

مواصفة مسمار 32: M4*10, silver, pan head
مواصفة مسمار 43: M6*10, silver, pan head

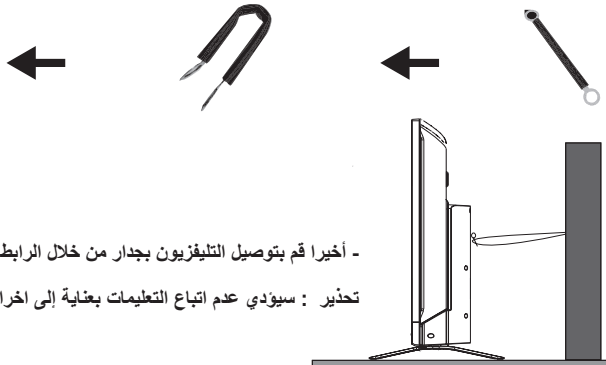

- أخيراً قم بتوصيل التلفزيون بجدار من خلال الرابطة المعدنية بواسطة رابط قوي كما هو مبين .

تحذير : سيؤدي عدم اتباع التعليمات بعناية إلى اخراج التلفزيون من الضمان .

إشعال

تظهر بقع سوداء، خطوط أفقية أو الصورة غير ثابتة. ينتج هذا عادة بسبب التداخل الناتج عن نظام إشعال السيارة، مصابيح النيون، المتقارب الكهربى أو الأجهزة الكهربائية الأخرى .

شبح

تتشأ الأشباح من خلال مسارين لإشارة التلفزيون التالين. واحد هو المسار المباشر، والآخر ينعكس من المباني العالية، التلال أو الأبنية المرتفعة الأخرى قد يؤدي تغيير إتجاه أو وضع الهوائي إلى تحسين جودة الإستقبال .

تداخل تردد الراديو ينتج عن هذا التداخل موجات متحركة أو خطوط قطرية، وفي بعض الحالات يتم فقدان التباين في الصورة. إبحث عن مصدر تداخل الراديو وتخلص منه .


إذا تم تعطل التلفزيون

- ١- إضغط على زر **⏻** لإيقاف تشغيل التلفزيون، إضغط عليه مرة أخرى لإعادة ضبط التلفزيون .
 - ٢- إفصل كابل الطاقة، ثم إضغط على زر **⏻** لإعادة ضبط التلفزيون .
- ملحوظة:** إذا لم تتمكن من حل المشكلة بهاتين الطريقتين، برجاء الإتصال بخدمة ما بعد البيع لحلها.

تركيب القاعدة

قم بتثبيت القاعدتين على الجهاز بإستخدام المسامير .

ملحوظة: الرسوم التوضيحية أدناه هي للإشارة فقط وقد تختلف عن مظهر المنتج الفعلي .



الملحقات

الملحقات الرئيسية هي

- دليل التشغيل ١ x
- جهاز التحكم عن بعد ١ x
- البطاريات ٢ x
- القاعدة ٢ x

مسامير القاعدة ٤ x

ملحوظة: قد تختلف الملحقات الأخرى وفقا لموديل الجهاز والمنطقة .

إستكشاف الأخطاء وإصلاحها

يمكن إصلاح معظم المشاكل التي تواجهها مع جهازك من خلال الرجوع إلى قائمة إستكشاف الأخطاء وإصلاحها التالية :

لا توجد صورة ولا يوجد صوت

- ١- تأكد من أن الفيوز أوقاطع الكهرباء يعمل بشكل جيد .
- ٢- قم بتوصيل جهاز كهربائي آخر في منفذ التيار الكهربى لتأكد من أنه يعمل أو قيد التشغيل .
- ٣- كابل الطاقة متصل بطريقة غير صحيحة بمنفذ التيار الكهربى
- ٤- تحقق من مصدر الإشارة.

لا يوجد ألوان

- ١- قم بتغيير نظام الألوان.
- ٢- ضبط مستوى درجة التشبع.
- ٣- جرب قناة أخرى. ربما يكون البرنامج الذى يتم إستقباله بالأبيض والأسود .

جهاز التحكم عن بعد لا يعمل

- ١- قم بتغيير البطاريات.
- ٢- لم يتم تركيب البطاريات بطريقة صحيحة.
- ٣- لم يتم توصيل مصدر الطاقة الرئيسى.

لا توجد صورة والصوت طبيعى

- ١- قم بضبط مستوى السطوع والتباين.
- ٢- ربما حدث فشل فى البث.

الصورة طبيعية ولا يوجد صوت

- ١- قم بالضغط على زر **Vol +** لزيادة مستوى الصوت .
- ٢- تم ضبط الصوت على كتم الصوت ، إضغط على زر كتم الصوت .

لإستعادة الصوت

- ٣- قم بتغيير نظام الصوت .
- ٤- ربما حدث فشل فى البث .

تموجات غير منتظمة على الصورة

يحدث هذا عادة بسبب التداخل المحلى، مثل السيارات، مصابيح الإضاءة ومجففات الشعر. إضبط الهوائي لتقليل التداخل .

نقاط تلجئة وتداخل

إذا كان الهوائي موجوداً في منطقة على حدود إستقبال إشارة التلفزيون حيث تكون الإشارة ضعيفة، فقد تشوه الصورة بنقاط. عندما تكون الإشارة ضعيفة للغاية، قد يكون من الضروري تثبيت هوائي خاص لتحسين جودة الإستقبال .

- ١- قم بضبط إتجاه وضع الهوائي الداخلى أو الخارجى.
- ٢- تحقق من توصيل الهوائي.
- ٣- قم بالبحث الدقيق للقنوات.
- ٤- جرب قناة اخري . ربما حدث فشل في البث.

قسم المراجع

تنبيه وأسلحة متكررة

تنبيه:

١. قد لا يتم التعرف على بعض أجهزة التخزين الغير قياسية. برجاء استخدام أجهزة تخزين قياسية.
- **ملاحظة:** فيما يتعلق بترميز، توجد أنواع كثيرة من طرق الترميز الغير قياسية، لذلك لا يمكن أن يضمن هذا النظام دعم تنسيقات الملفات التي تستخدم أى طريقة ترميز.

أسئلة متكررة :

١. في ظل الظروف التالية، يتعذر على هذا النظام فك تشفير الملف ويتعذر تشغيل الملف بشكل طبيعي :
- معلمات الملف، مثل بكسل الصورة، معدل ترميز ملف الصوت وملف الفيديو أو معدل أخذ العينات لملف الصوت، يتجاوز حد النظام .
- تنسيق الملف غير متوافق أو الملف تالف.
٢. التوصيل السريع: لا تفصل الجهاز أثناء قيام النظام براءة أو نقل البيانات لتجنب تلف النظام أو الجهاز .
٣. انتبه لمصدر إمداد الجهاز بالطاقة عند استخدام قرص ثابت متنقل أو كاميرا ديجيتال. إذا كان مصدر الإمداد بالطاقة غير كاف أو غير مستقر، فقد تواجه مشكلات أثناء التشغيل أو يتعذر التشغيل على الإطلاق. في هذه الحالة برجاء إعادة تشغيل الجهاز أو فصل الجهاز وتوصيله مرة أخرى والتأكد من أن مصدر الإمداد بالطاقة يعمل بشكل طبيعي. يدعم النظام أجهزة مثل USB1.1 و USB2.0 القياسية مثل أقراص USB ومشغلات MP3 والأقراص الصلبة المحمولة وغيرها.
٥. للحصول على جودة صورة وصوت أفضل، يُنصح استخدام جهاز خارجي الذي يتوافق مع معيار USB2.0.

٦. عند تشغيل الفيديو بمعدل ضغط عالي، فإن هذه الظواهر مثل التوقف المؤقت للصورة ووقت الإستجابة الطويل للقائمة يكون طبيعياً .
٧. فيما يتعلق ببعض أجهزة USB التي تحتاج إلى مصدر إمداد بالطاقة مثل الأقراص الصلبة ذات الأحجام الكبيرة MP4 وغيرها، يُنصح استخدامها مع مصدر طاقة لتجنب حدوث قصر في الطاقة الكهربائية.

32ES4600E / 32ES4600G / 32ES4600X	
أبعاد الكرتون (الطول*العرض*الإرتفاع) (مم)	١١٣.٠*١٥.٠*٦.٥
الوزن الصافي بالقاعدة (كجم)	٤.٥
الوزن الإجمالي مع التغليف (كجم)	٥.٧
مصدر التيار الكهربى (فولت)	٢٤٠ - ١٠٠
إستهلاك الطاقة (فى حالة التشغيل) (وات)	٥٥
إستهلاك الطاقة (فى وضع الإستعداد) (وات)	٠.٥
نظام التلفزيون	PAL, NTSC, SECAM
قدرة خرج الصوت (وات)	٨*٢
الدقة	١٣٦٦*٧٦٨

32ES4600E / 32ES4600G / 32ES4600X	
أبعاد الكرتون (الطول*العرض*الإرتفاع) (مم)	١١٣.٠*١٥.٠*٦.٥
الوزن الصافي بالقاعدة (كجم)	٧.٦
الوزن الإجمالي مع التغليف (كجم)	٩.٣
مصدر التيار الكهربى (فولت)	٢٤٠ - ١٠٠
إستهلاك الطاقة (فى حالة التشغيل) (وات)	٧٥
إستهلاك الطاقة (فى وضع الإستعداد) (وات)	٠.٥
نظام التلفزيون	PAL, NTSC, SECAM
قدرة خرج الصوت (وات)	١٠*٢
الدقة	١٩٢٠*١٠٨٠

Shield

32ES4600E-A & 32ES4600G-A & 32ES4600X-A)	
الوزن الصافي بالقاعدة (كجم)	٦.٣
الوزن الاجمالى مع التغليف (كجم)	٧.٧

43ES4600E-A & 43ES4600G-A & 43ES4600X-A)	
الوزن الصافي بالقاعدة (كجم)	١١.٩
الوزن الاجمالى مع التغليف (كجم)	١٣.٩٩

ضبط تلقائي

البحث التلقائي يمكن البحث عن قناة البرنامج الفعال تلقائياً.

اضغط على ▲/▼ زر لتعديل Auto Tuning (ضبط تلقائي)، ثم اضغط على الزر OK (موافق) للقيام بذلك بدء البحث التلقائي. إذا كنت تريد إيقاف البحث، فاضغط على زر EXIT أو MENU لإيقاف البحث.

ضبط الشبكة

يضغط / ▲ زر لتعديل ضبط الشبكة، ثم اضغط على الزر «موافق» للقيام بذلك أدخل الفرعية قائمة طعام. اضغط على زر EXIT أو MENU للخروج.

ضبط يدوي

البحث اليدوي التناظري يمكن البحث عن قناة برنامج المحاكاة الفعالة يدوياً. اضغط على زر ▲/▼ لتحديد ضبط يدوي، ثم اضغط على الزر «موافق» للقيام بذلك أدخل الفرعية قائمة طعام. اضغط على زر EXIT أو MENU للخروج.

التردد (كيلو هرتز)

اضغط على زر ▲/▼ لتحديد التردد (كيلو هرتز).

اضغط على زر ▲/▼

زر لتعديل نطاق المسح. يضغط / ▲ زر لتعديل الكل/مجان/مشفر دي في بي-تي/٢

ضبط

اضغط على ▲/▼ زر لتعديل Tuning. اضغط على زر OK للدخول إلى القائمة الفرعية.

زر لتعديل الضبط التلقائي/الضبط اليدوي.

اضغط على زر ▲/▼

زر لتعديل نطاق المسح. يضغط / ▲ زر لتعديل الكل/مجان/مشفر.

اضغط على زر ▲/▼

زر لتعديل نطاق المسح. يضغط / ▲ زر لتعديل الكل/مجان/مشفر

زر لتعديل تشغيل/إيقاف.

ضبط تلقائي

اضغط على ▲/▼ زر لتعديل Auto Tuning (ضبط تلقائي)، ثم اضغط على الزر OK (موافق) للقيام بذلك بدء البحث التلقائي. إذا كنت تريد إيقاف البحث، فاضغط على زر EXIT أو MENU لإيقاف البحث.

ضبط يدوي

البحث اليدوي التناظري يمكن البحث عن قناة برنامج المحاكاة الفعالة يدوياً. اضغط على زر ▲/▼ لتحديد ضبط يدوي، ثم اضغط على الزر «موافق» للقيام بذلك أدخل الفرعية قائمة طعام. اضغط على زر EXIT أو MENU للخروج.

يضغط ▲/▼

زر لتعديل القناة. يضغط / ▲ زر لتعديل.

يضغط ▲/▼

زر لتعديل التردد (ميجاهرتز). يضغط / ▲ زر لضبط.

يضغط ▲/▼

لتحديد نطاق المسح. يضغط / ▲ زر لتعديل الكل/مجان/مشفر.

وسائط

اضغط على الزر ▲ / ▲ لتحديد الوسائط في الصفحة الرئيسية أو اضغط على زر الوسائط الموجود على جهاز التحكم عن بُعد، ثم اضغط على الزر موافق للدخول إلى Media Center.

فيلم

اضغط على الزر ▲ / ▲ لتحديد فيلم، ثم اضغط على ▲/▼ / ▲ زر لتعديل الأفلام. اضغط على زر القائمة لعرض خيارات الإعداد السريع على الجانب الأيمن.

صورة

اضغط على الزر ▲ / ▲ لتحديد صورة، ثم اضغط على ▲/▼ / ▲ زر لتعديل الصور. اضغط على زر القائمة لعرض خيارات الإعداد السريع على الجانب الأيمن.

موسيقى

اضغط على الزر ▲ / ▲ لتحديد الموسيقى، ثم اضغط على ▲/▼ / ▲ زر لاختيار الموسيقى. اضغط على زر القائمة لعرض خيارات الإعداد السريع على الجانب الأيمن

لتحديد نوع المسح الضوئي.

المعادل

اضغط على زر ▲/▼ التشغيل للتحديد للمعادل.

اضغط على زر موافق للدخول إلى القائمة الفرعية ثم اضغط ▶ / زر توازن

متوازن القنوات اليسرى واليمينى.

يضغط ▲/▼ زر لتحديد الرصيد. اضغط ▶ / زر لضبط.

حجم تلقائي

يضغط ▲/▼ زر لتحديد مستوى الصوت التلقائي. اضغط ▶ / زر لتحديد تشغيل/إيقاف.

الصوت المحيط

يضغط ▲/▼ زر لتحديد الصوت المحيطي. اضغط ▶ / زر لتحديد تشغيل/إيقاف.

خيارات متقدمة

يضغط ▲/▼ زر لتحديد خيارات متقدمة. اضغط على زر موافق للدخول إلى القائمة الفرعية.

صوت رقمي

اضغط على زر ▲/▼ لتحديد إخراج الصوت الرقمي.

أضبط ▶ / زر لتحديد AUTO/PCM.

الوصف الصوتي

أضبط ▲/▼ زر لتحديد الوصف الصوتي. يضبط على زر دخول إلى القائمة الفرعية.

إعادة ضبط الصوت

يضغط ▼ / زر الزر لتحديد إعادة ضبط الصوت.

يضغط ▶ / لتحديد إعادة تعيين أم لا.

الإعدادات العامة

أضبط زر ok للدخول إلى القائمة الرئيسية.

أضبط على زر ▲/▼ لتحديد الإعدادات العامة.

اضغط على زر موافق للدخول إلى القائمة الفرعية.

وقت

أضبط زر ok للدخول إلى القائمة الرئيسية.

أضبط على زر ▲/▼ لتحديد الوقت.

اضغط على زر موافق للدخول إلى القائمة الفرعية.

اضغط على زر ▲/▼ لتحديد وضع الساعة/السنة/الشهر/التاريخ/

الساعة/الدقيقة/المنطقة الزمنية/التوقيت الصيفي/مؤقت النوم/

الاستعداد التلقائي

اضغط على زر MENU أو EXIT للخروج.

وضع الساعة

اضغط ▲/▼ زر لتحديد وضع الساعة.

يضغط ▶ / زر لتحديد المنطقة الزمنية.

سنة / شهر / تاريخ / ساعة / دقيقة متاحة فقط عند ضبط وضع الساعة

على «بدوي».

وحدة زمنية

اضغط على زر ▲/▼ التشغيل للتحديد وحدة زمنية.

التوقيت الصيفي

يضغط ▲/▼ زر لتحديد التوقيت الصيفي. يضبط ▶ / زر لتحديد تشغيل/إيقاف.

وقت النوم

يضغط ▲/▼ زر لتحديد وقت النوم.

يضبط ▶ / زر لتحديد إيقاف/١٠ دقائق/٢٠ دقيقة/٣٠ دقيقة/٦٠

دقيقة/٩٠ دقيقة/١٢٠ دقيقة/١٨٠ دقيقة/٢٤٠ دقيقة.

تطبيق تلقائي

أضبط على زر ▲/▼ لتحديد الاستعداد التلقائي

يضبط ▶ / زر لتحديد إيقاف/٤ ساعات/٦ ساعات/٨ ساعات.

قفل

أضبط زر ok للدخول إلى القائمة الرئيسية.

يضبط ▲/▼ زر لتحديد قفل.

اضغط على زر موافق لإدخال كلمة المرور للدخول إلى القائمة الفرعية.

(كلمة المرور الافتراضية هي ٠٠٠٠)

يضبط ▲/▼ زر لتحديد قفل النظام/تعيين كلمة المرور/توجيه الوالدين.

قفل النظام

يضبط ▲/▼ زر لتحديد قفل النظام

ضبط كلمة السر

يضبط ▲/▼ زر لتحديد ضبط كلمة السر.

يضبط زر موافق لضبط كلمة السر.

لتحديد إيقاف/٤~١٨. ▶ / أضبط على زر

لغة القائمة

أدخل القائمة الفرعية.

أضبط على زر ▲/▼ لتحديد لغة القائمة

اللغة الصوتية

أضبط على زر ▲/▼ لتحديد اللغة الصوتية.

أدخل إلى القائمة الفرعية ثم اضغط على زر ▲/▼

لتحديد الابتدائي/الثانوي

أضبط على زر ▲/▼ لتغيير لغة الترجمة .

تبديل الترجمة

أضبط على زر ▲/▼ لتحديد الترجمة التبديل

أضبط على زر ▲/▼ للدخول إلى القائمة الفرعية

ضعف السمع

أضبط على زر ▲/▼ لتحديد تشغيل/إيقاف

خيار متقدم

اضغط على زر ▲/▼ لتحديد خيار متقدم.

اضغط على زر موافق للدخول إلى القائمة الفرعية.

وسائط

اضغط على الزر ◀ / ▶ لتحديد الوسائط في الصفحة الرئيسية أو
اضغط على زر الوسائط الموجود على جهاز التحكم عن بُعد، ثم اضغط
على الزر موافق للدخول إلى Media Center.

فيلم

اضغط على الزر ◀ / ▶ لتحديد فيلم، ثم اضغط على ▶/▲/▼ / ▶ /
زر لتحديد الأفلام. اضغط على زر القائمة لعرض خيارات الإعداد السريع
على الجانب الأيمن.

صورة

اضغط على الزر ◀ / ▶ لتحديد صورة، ثم اضغط على ▶/▲/▼ / ▶ /
زر لتحديد الصور. اضغط على زر القائمة لعرض خيارات الإعداد
السريع على الجانب الأيمن.

موسيقى

اضغط على الزر ◀ / ▶ لتحديد الموسيقى، ثم اضغط على ▶/▲/▼ / ▶ /
زر لاختيار الموسيقى. اضغط على زر القائمة لعرض خيارات
الإعداد السريع على الجانب الأيمن.

طريقة ربط الجهاز بالتلفزيون

نقل محتوى التلفزيون المحمول عن طريق التطبيق
من الصفحة الرئيسية

قم باختيار

coolink

لتشغيل مصدر البث الحالي من تلفونك المحمول للتلفزيون قم بتثبيت
تطبيق

coolink

على جهاز التلفزيون المحمول من متجر التطبيقات أو قم بمسح الباركود
الظاهر على الشاشة

يمكن الوصول لهذه الخاصية عن طريق الضغط على زر المصدر ثم
وظيفة النظام

ثم إتباع نفس الخطوات السابقة

نقل محتوى التلفزيون المحمول عن طريق خاصية البث الموجودة بالجهاز
من الصفحة الرئيسية

قم بالضغط على زر المصدر ثم وظيفة النظام ثم اختر علامة البث
ثم اختر نوع نظام التشغيل الخاص ب تلفونك المحمول

ثم اختر

بدء البث

خيارات متقدمة

يضغط ▼ / ▲ لتحديد خيارات متقدمة

تقليل الضوضاء

اضغط على زر ▼ / ▲ لتحديد تقليل الضوضاء.
اضغط على زر ◀ / ▶ لتحديد إيقاف/منخفض/متوسط/عالي/تلقائي.

تقليل الضوضاء MPEG

يضغط ▼ / ▲ لتحديد تقليل ضوضاء MPEG. اضغط على الزر ◀ /
▶ لتحديد تشغيل/إيقاف.

التباين المحلي

اضغط على زر ▼ / ▲ لتحديد التباين المحلي. اضغط على الزر ◀ /
▶ لتحديد إيقاف/منخفض/متوسط/عالي.

التباين الديناميكي

اضغط على زر ▼ / ▲ لتحديد التباين الديناميكي. اضغط على زر ▼ /
▲ لتحديد إيقاف/منخفض/متوسط/مرتفع.

حماية العين

اضغط على زر ▼ / ▲ لتحديد حماية العين.
يضغط ▼ / ▲ زر لتحديد تشغيل/إيقاف

إعادة ضبط الصورة

يضغط ▼ / ▲ لتحديد إعادة ضبط الصورة.
يضغط ◀ / ▶ لتحديد إعادة تعيين أم لا.

إعدادات الصوت

اضغط زر OK للدخول إلى القائمة الرئيسية.

اضغط على زر ▼ / ▲ لتحديد الصوت.

اضغط على زر موافق للدخول إلى القائمة الفرعية.

اضغط على زر ▼ / ▲ لتحديد وضع الصوت/المعادل/التوازن/مستوى
الصوت التلقائي/الصوت المحيطي/الخيار المتقدم/إعادة ضبط الصوت.

اضغط على زر MENU أو EXIT للخروج.

وضع الصوت

اضغط ▼ / ▲ زر لتحديد وضع الصوت.

يضغط ◀ / ▶ زر لتحديد قياسي/كرة القدم/فيلم/موسيقى/مستخدم.

معايير تتبع صوت منها صوت متوازن تحت أي ظرف من الظروف .

فيلم يعزز ثلاثة أضعاف لتجربة صوت غنية.

موسيقى يحسن درجة الصوت العالية وتقليل الجهرير.

مستخدم حدد لتخصيص إعدادات الصوت.

قائمة الوظائف

واضح قم بتعزيز تباين الشاشة ولونها ووضوحها لجعل اللون أكثر حيوية. سابقة بمعنى البُنية تقليل سطوع الشاشة وتحسين التباين لتوفير الطاقة.

فيلم	هذا الوضع مناسب أكثر لمشاهدة الأفلام
لعبة	هذا الوضع مناسب أكثر لممارسة الألعاب.
رياضة	هذا الوضع مناسب أكثر للبرامج الرياضية.
مستخدم	يختار لتخصيص إعدادات الصورة.

الإضاءة الخلفية الديناميكية

يضعط ▼ / ▲ زر للاختيار الإضاءة الخلفية الديناميكية و اضغط ▼ / ▲ على زر لتحديد تشغيل/إيقاف

الإضاءة الخلفية

أضعط على زر ▼ / ▲ لتحديد الإضاءة الخلفية .

أضعط على زر ▼ / ▲ لتحديد

السطوع/التباين/اللون/درجة اللون /حدة اللون

هذه الشروط متاحة فقط عند تحديد "المستخدم".

وضع الصورة.

يضعط ▼ / ▲ الزر لتحديد التباين/السطوع/اللون/الحدة.

يضعط ▼ / ▲ زر لضبط.

مقابلة يعدل على التقيض من الصورة.

سطوع يعدل سطوع الصورة. لون يعدل شدة اللون في الصورة.

حدة يعدل حدة حافة الصورة.

درجة حرارة اللون

يعدل اللون العام للصورة.

يضعط ▼ / ▲ زر لتحديد درجة حرارة اللون.

يضعط ▼ / ▲ زر لتحديد قياسي/دافى/مستخدم/بارد.

قياسي الصورة لا تحبذ أي لون. اللون معتدل.

دافى الصورة يزداد اللون الأحمر والأخضر وأقل من اللون

الأزرق لجعل اللون أكثر حيوية ونعومة.

مستخدم يختار لتخصيص إعداد درجة حرارة اللون.

بارد الصورة لصالح الأخضر والأزرق وأقل الأحمر.

اللون كله لصالح الضوء. الصورة أكثر نضارة وأناقة.

R Gain/G Gain/B Gain

هذه الشروط متوفرة فقط

عند تحديد «المستخدم» فى درجة حرارة اللون.

يضعط ▼ / ▲ زر لتحديد R Gain/G Gain/B Gain.

يضعط ▼ / ▲ زر لضبط.

إبعاد متزنة

يضعط ▼ / ▲ لتحديد نسبة العرض إلى الارتفاع.

يضعط ▼ / ▲ زر لتحديد ١٦ : ٩ : ٣ : ٤ / ألى /فيلم.

يضعط ▼ / ▲ / ► زر لتحديد الإدخال على الصفحة الرئيسية.

يضعط ▼ / ▲ زر لتحديد/ATV/DVB-C/DVB-T/T2/AV1/AV2

HDMI1/HDMI2. أو اضغط على زر الإدخال، ثم اضغط على

► / ► زر لتحديد المصدر.

يضعط ▼ / ▲ زر لتحديد مصدر الإدخال الذي تريده. اضغط على زر

"موافق" للدخول. اضغط على زر "خروج" للخروج.

الإعدادات

أضعط زر OK للدخول إلى الإعدادات

أضعط ▼ / ► زر لتبسيط الضوء على أيقونة القائمة المطلوبة،

ثم اضغط على زر موافق للاختيار.

(خيارات: شبكة/إعدادات/إعدادات الصورة/إعدادات الصوت /

لإعدادات العامة/حول هذا الجهاز)

إعدادات الشبكة

أضعط زر OK للدخول إلى القائمة الرئيسية.

يضعط ▼ / ▲ زر لتحديد إعدادات الشبكة.

أضعط على زر موافق للدخول إلى القائمة الفرعية.

يضعط ▼ / ▲ زر لتحديد اتصال سلكي/اتصال لاسلكي/حالة الشبكة/توفير

البيانات.

أضعط على زر موافق للدخول إلى القائمة الفرعية.

إعدادات الصورة



أضعط زر OK للدخول إلى القائمة الرئيسية.

يضعط ▼ / ▲ زر لتحديد إعدادات الصورة.

أضعط على زر موافق للدخول إلى القائمة الفرعية.

وضع الصورة

تبسيط الضوء/العنصر واضغط على زر موافق للدخول إلى القائمة الفرعية

التي تعرض وضع الصورة الذي يمكنك اختياره.


يضعط ▼ / ► زر لتحديد قياسي/ديناميكي/ناعم/حيوي/مستخدم.

إنتاج قياسي صورة قياسية.





أضبط على زر ▲/▼ لتحديد الشبكة واضغط على زر موافق للانتقال إلى الصفحة التالية

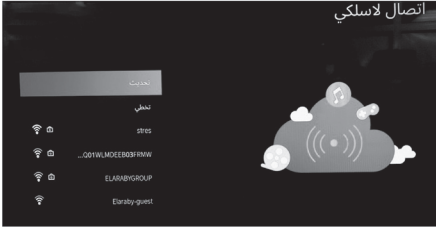

يختار «قبول» للموافقة على شروط الاستخدام وسياسة الخصوصية، ثم اختر تمكين خدمة إضافية محددة أعلاه عن طريق التحديد بشكل فردي. اختر طرقاً مختلفة لتنشيط نظام التلفزيون الذكي الخاص بك. اضغط ▲/▼ زر لتحديد مصدر التلفزيون وقناة المسح.

أدخل الصفحة الرئيسية بعد عمل بحث قنوات

أضبط على زر ▲/▼ للتحديد والدخول على الصفحة الرئيسية. اضغط ▲/▼ زر لتحديد من أجلك/أفلام/برامج تلفزيونية/أطفال/البث التلفزيوني المباشر /متجر التطبيقات/الرسوم المتحركة

الرسوم المتحركة

اضغط ▲/▼ زر لتحديد الرسوم المتحركة ثم اضغط على زر ▲/▼ لا اختيار الفيلم الذي يعجبك.

أفلام

أضبط على زر ▲/▼ واضغط على MOVIES ثم اضغط على زر ▲/▼ لا اختيار الفيلم الذي يعجبك.

عرض تلفزيوني

أضبط ▲/▼ زر لتحديد عروض التلفاز واضغط على زر ▲/▼ زر لا اختيار البرنامج التلفزيوني الذي تفضله.

أطفال

أضبط على زر ▲/▼ لا اختيار أطفال واضغط على زر ▲/▼ لا اختيار الأطفال


فيديوهات قصيرة

اضغط ▲/▼ زر لتحديد TV SHORT VIDEOS ثم اضغط على زر ▲/▼ زر لا اختيار مقاطع الفيديو القصيرة التي تريدها.

الإعدادات


سيظهر إعدادات النظام عند فتح التلفزيون لأول مرة. يرجى الضبط وفقاً للدليل الذي يظهر على الشاشة. اضغط على زر موافق ليبدء الإعدادات. اضغط ▲/▼ زر لتحديد اللغة واضغط على زر موافق للانتقال إلى الصفحة التالية.

اختيار اللغة

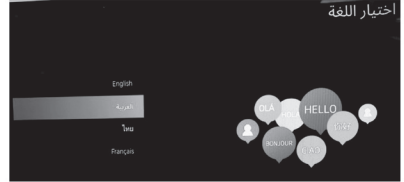


اضبط على زر ▲/▼ لتحديد البلد واضغط على زر موافق للانتقال إلى الصفحة التالية.

تحديد البلد

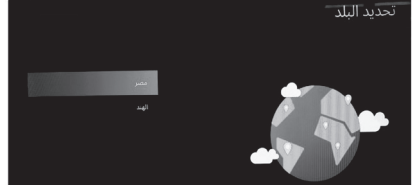

أضبط على زر ▲/▼ لتحديد المنطقة الزمنية واضغط على زر موافق للانتقال إلى الصفحة التالية.

اختيار المنطقة الزمنية

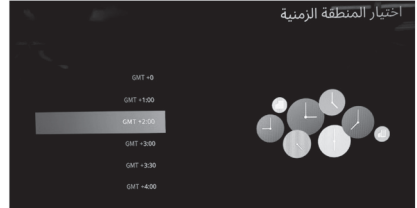

أضبط على زر ▲/▼ لتحديد البيئة واضغط على زر موافق للانتقال إلى الصفحة التالية.

اختيار البيئة



يختار الموافقة على الاتفاقية، ثم اضغط على زر «التالي» للانتقال إلى الصفحة التالية.

الشروط والخصوصية



وظائف جهاز التحكم عن بعد

1. تشغيل الجهاز
- ضبطه على وضع الاستعداد
2. كتم الصوت
3. زرار التصفح : (أعلى /أسفل /شمال/يمين)
4. ok : تأكيد العنصر المحدد أو الدخول إليه أو تنفيذه أو الوصول إلى قائمة القنوات .
5. القائمة السريعة : الدخول على وظائف النظام (coolink -المحفوظات -وسائط -cast- بحث -الإشعارات)
- الدخول على القائمة السريعة
- (إعداد القناة -وضع الصورة-وضع الصوت-نسبة العرض إلى الارتفاع
- موقت السكون -لغة الصوت- لغة الترجمة -TEXT
- وصف الصوت -الإعدادات)
- أضبط باستمرار للوصول إلى لوحة المفاتيح المخفية
6. رجوع : الرجوع إلى المحتوى السابق أو الخروج من الشاشة الحالية
7. زر تقليل مستوى الصوت
8. زر زيادة مستوى الصوت
9. الدخول إلى الصفحة الرئيسية
10. الدخول إلى مداخل الجهاز
11. الدخول إلى تطبيق المتصفح
12. الدخول إلى تطبيق اليوتيوب
13. الدخول إلى تطبيق برايم فيديو



التوصيلات والإعدادات

التشغيل

إتبع الإرشادات الواردة في هذه الصفحة حول كيفية تشغيل الجهاز وجهاز التحكم عن بعد قبل الانتقال إلى الصفحات التالية التي تصف كيفية إجراء إعداد القناة .

١- أدخل بطاريتين AAA في جهاز التحكم عن بعد .

الاحتياطات الخاصة باستخدام البطاريات

- استخدم أنواع بطاريات محددة .
- تأكد من استخدام الاتجاه الصحيح للبطاريات .
- لا تقم بخلط البطاريات الجديدة بالمستعملة .
- لا تستخدم البطاريات القابلة لإعادة الشحن .
- لا تعرض البطاريات للحرارة الزائدة مثل أشعة الشمس، النار أو ما شابه ذلك أو رميها في النار ، إعادة شحنها أو محاولة فتحها لأن ذلك قد يؤدي إلى تسربها أو انفجارها .
- قم بإزالة البطاريات من وحدة التحكم عن بعد إذا لم تستخدمها لفترة طويلة .

٢- قم بتوصيل كابل الطاقة أولاً بالجهاز ثم إلى منفذ التيار الكهربائي. يجب توصيل الجهاز الخاص فقط بمصدر تيار متردد. يجب ألا يتم توصيله بمصدر تيار مستمر. إذا كان الفيشة مفصولة عن الكابل، فلا تستخدمه تحت أي ظرف من الظروف ولا تقم بتوصيله بمنفذ تيار كهربى لأن هناك خطر حدوث صدمة كهربائية .

٣- قم بتوصيل الهوائي الخارجى بمدخل ANTENNA .

في الجزء الخلفى من التلفزيون. يمكن استخدام مدخل الهوائي (٧٥ أوم/ VHF / UHF / كابل) لتوصيل هوائي خارجي أو معدات أخرى.

٤- عند توصيل كابل الطاقة، سيتم تشغيل الجهاز مباشرة أو يكون في وضع الاستعداد. إذا كان مؤشر الطاقة يضيء باللون الأحمر ، فإن هذا يعنى أن الجهاز في وضع الاستعداد. اضغط على زر **ON** الموجود على جهاز التحكم عن بعد أو على الجهاز لتشغيل الجهاز.

إيقاف التشغيل

١- لوضع الجهاز في وضع الاستعداد، اضغط على زر **ON** الموجود على الجهاز التحكم عن بعد، على الجهاز (متاح فقط لـ 43ES4600E) أو على جهاز (الجهاز لفترة طويلة لمدة خمس ثواني (متاح فقط لـ 43ES4600E)

٢- يبقى الجهاز بالطاقة ولكن مع انخفاض استهلاك الطاقة لإيقاف تشغيل الجهاز قم بفصل كابل الطاقة من منفذ التيار الكهربى .

AV IN

يمكن استخدام هذا المدخل لتوصيل جهاز مثل مسجلات الفيديو، وكاميرات الفيديو، وأجهزة فك التشفير، وأجهزة استقبال الأقمار الصناعية، مشغل DVD أو وحدات التحكم بالألعاب. ويوفر توصيل الفيديو المركب.

USB

يمكن استخدام هذا المدخل لتوصيل جهاز USB.

EARPHONE OUT

يمكن استخدام هذا المدخل لتوصيل سماعات الأذن للإستماع إلى الصوت القادم من الجهاز.

ملحوظة: قد يؤدي ضغط الصوت الزائد من سماعات الأذن إلى فقدان السمع.

المظهر الخارجي للجهاز:

قد يختلف المظهر الخارجي الفعلي للجهاز عن الصورة التي على الكرتون بناءً على موديل الجهاز.

ANT(RF)

توصيل هوائي VHF/UHF خارجي .

(HDMI) واجهة الوسائط المتعددة عالية الدقة

يمكن استخدام هذا المدخل لتوصيل جهاز مثل مشغل Blu-ray مع مخرج HDMI للحصول على أفضل جودة للصورة.

كما يوفر إتصال ديجيتال غير مضغوط

يحمل كل من بيانات الصورة والصوت عن طريق كابل مدمج صغير .

(LAN) RJ45

توصيل كابل Ethernet للوصول إلى أي شبكة أو الانترنت.


Digital Audio Output

(مخرج صوت رقمي) يستخدم كبل متحد المحور لإخراج إشارة صوت التلفزيون إلى أي جهاز استقبال صوت رقمي متوافق

أضرار على الجهاز

ملحوظة: قد يختلف موقع وأسماء أضرار الوظائف على الجهاز وفقاً لموديل الجهاز.

**32ES4600E
43ES4600E**

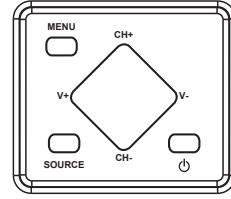**زر MENU**

إضغط عليه لعرض القائمة.

زر-CH +

ينتقل لأعلى/لأسفل في قائمة القنوات.

زر- V +

يزيد/يخفض مستوى الصوت.

زر SOURCE

إضغط عليه لتغيير مصدر الدخل.

زر ⏻

• الجهاز في وضع التشغيل.

- إضغط عليه لتحويل الجهاز إلى وضع الاستعداد.

• الجهاز في وضع الإستعداد.

- إضغط عليه لتحويل الجهاز إلى وضع التشغيل.

المداخل

ملحوظة: قد يختلف موقع وأسماء المداخل على الجهاز وفقاً لموديل الجهاز وقد لا تتوفر بعض المداخل لبعض الموديلات.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

تعليق الجهاز على الحائط


تحذير: تتطلب هذه الوظيفة شخصين.

لتأكد من التركيب السليم. إتبع ملاحظات السلامة التالية:

- تحقق من أن الحائط يتحمل وزن الجهاز وحامل التركيب على الحائط.
- إتبع تعليمات التركيب الموجودة مع حامل التركيب على الحائط.
- يجب تركيب الجهاز رأسياً على الحائط.
- تأكد من استخدام المسامير المناسبة لمادة الحائط.
- تأكد من وضع كابلات الجهاز في أماكنها لتجنب خطر تعثرها.
- كما تطبق جميع تعليمات السلامة الأخرى الخاصة بالجهاز هنا.

تحذير: لمنع الإصابة ، وهذا الجهاز يجب أن يعلق بشكل آمن على سطح مستقر / الجدار وفقاً لتعليمات التنبيت.

- قم بتنبيت التلفزيون في مكان أفقي ومستقيم
- لتأمين التلفزيون ، استخدم حزاماً قوياً من الخياط على الجزء الخلفي من التلفزيون وصولاً إلى أي وت عمود بالحائط أو للربط بأي هيكل آخر ثابت.
- تأكد من ربط الحزام ومن توازيه مع الارضية.
- لا تقف أو تتسلق على التلفزيون أبدًا. قم بتوعية الأطفال حول مخاطر التسلق على الأثاث للوصول إلى التلفزيون أو أدوات التحكم الخاصة به.
- كن حذراً بشكل خاص في المنازل التي لديها أطفال لمنعهم من التسلق فوق التلفزيون. قد يتحرك أو يسقط أو ينكسر أو يتلف أو يتسبب في إصابة.

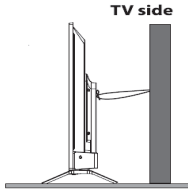

البطاريات

- يجب ألا تعرض البطاريات للحرارة الزائدة مثل ضوء الشمس، النار أو ما شابه ذلك.
- أزل البطاريات من وحدة التحكم عن بعد عند عدم استخدامها لفترة طويلة قد يسبب ترك البطاريات في وحدة التحكم عن بعد إلى حدوث التلف من خلال التدهور والتسريب المسبب للتآكل، مما يؤدي إلى إبطال الضمان.
- قد يؤدي استبدال البطاريات بنوع غير صحيح إلى التعرض لخطر الانفجار.
- استبدل البطاريات ببطاريات من نفس النوع أو بنوع مماثل توصي به الشركة المصنعة للجهاز.
- لحماية البنية استخدم مرافق إعادة التنوير المحلية للتخلص من البطاريات.
- تخلص من البطاريات المستعملة وفقاً للتعليمات.

العمر الافتراضي

تلتزم شركة العربي داخل جمهورية مصر العربية بتوفير الصيانة وقطع الغيار بعد انتهاء فترة الضمان بمقابل مادي وذلك لمدة ١ سنة.

الإحتياجات

برجاء قراءة جميع الإرشادات قبل تشغيل الجهاز. حافظ على هذه الإرشادات جيداً لإستخدامها في المستقبل.

المنتج

- لا تسد فتحات التهوية الموجودة على الغطاء الخلفي للجهاز أو تغطيتها.
- لا تدفع أشياء من أي نوع إلى داخل الجهاز من خلال فتحات الغطاء الخلفي. حيث قد تلامس أجزاء توصيل التيار أو أجزاء من دائرة القصر، مما ينتج عنه نشوب حريق، التعرض لصدمة كهربائية أو حدوث تلف بالجهاز.
- لا تحاول فتح الغطاء الخلفي حيث قد يؤدي ذلك إلى حدوث تلف.
- لا توجد أي أجزاء داخل الجهاز يمكنك إصلاحها بنفسك. برجاء الرجوع إلى موظف صيانة مؤهل لإجراء جميع أعمال الصيانة.
- لا تلمس سطح الشاشة بأصابعك حيث قد يؤدي ذلك إلى خدشها أو ظهور علامات على شاشة الجهاز.
- لا تقوم بالضغط على شاشة الجهاز حيث قد يؤدي ذلك إلى تلف شاشة الجهاز بشدة.

الطاقة والتوصيل

- إفصل الجهاز في ظل الظروف التالية:
- عند عدم إستخدام الجهاز لفترة زمنية طويلة.
- عند تلف كابل الطاقة أو مدخل / مخرج الطاقة.
- إتبع الإرشادات لتركيب وضبط الجهاز. إضبط وحدات التحكم التي يتم الإشارة إليها في تعليمات التشغيل حيث قد يؤدي الضبط غير الصحيح لوحداث التحكم إلى حدوث تلف للجهاز. عند حدوث ذلك، إفصل الجهاز وقم بالرجوع إلى موظف الصيانة.
- إذا حدث صدمة للجهاز أو سقط مما أدى إلى تلف الغطاء الخلفي
- عند إستخدام مدخل التيار الكهربى أو الأجهزة المقترنة كجهاز فصل، يجب أن يظل جاهزاً للتشغيل بسرعة.

كابل الطاقة وكابل الإشارة

- لا تسمح بوضع أي شئ على كابل الطاقة وكابل الإشارة أو لفهما.
- أحمى كابل الطاقة وكابل الإشارة من أن يداس عليهم.
- لا تزيد الحمل على كابل الطاقة أو منفذ الطاقة.
- لا تعرض كابل الطاقة وكابل الإشارة للرطوبة.

بيئة الإستخدام

- لا تضع الجهاز على عربة، حامل أو منضدة غير مستقرة.
- قم بوضع الجهاز في مكان يسمح بالتهوية الجيدة له.
- لا تستخدم الجهاز بالقرب من المناطق الرطبة والباردة. أحمى الجهاز من الحرارة الزائدة.
- أحفظ الجهاز بعيداً عن ضوء الشمس المباشر.
- لا يجب أن يتعرض الجهاز لتقطير المياه أو رشها ولا يجب وضع أشياء ممتلئة بالسوائل مثل الزهريرات على الجهاز.
- لا تستخدم الجهاز في بيئات بها غبار أو أتربة.

التنظيف

- أزل الغبار من على الجهاز من خلال مسح الشاشة والغطاء الخلفي بإستخدام قطعة قماش ناعمة ونظيفة أو بعض المنظفات السائلة الخاصة.
- لا تضغط بشدة على الشاشة أثناء التنظيف.
- لا تستخدم الماء أو منظفات كيميائية أخرى لتنظيف الشاشة حيث قد يؤدي ذلك إلى تلف سطح شاشة الجهاز.

الفصل ١ : المقدمة

٣	الإحتياجات.....
٣	- المنتج.....
٣	- الطاقة والتوصيل.....
٣	- كابل الطاقة وكابل الإشارة.....
٣	- بيئة الإستخدام.....
٣	- التنظيف.....
٣	- تعليق الجهاز على الحائط.....
٣	- البطاريات.....
٤	أزرار على الجهاز.....
٤	المدخل.....
٥	وظائف جهاز التحكم عن بعد.....

الفصل ٢ : التوصيلات والإعداد

٦	التشغيل.....
٦	إيقاف التشغيل.....

الفصل ٣ : الاعدادات

٧	قائمة الوظائف.....
٧	- الشبكة.....
٧	- الصورة.....
٨	- وسائط - مشاركة الشاشة.....
٧	-الصوت.....
٨	- الوقت.....
٩	- اختيار.....
٨	- القفل.....
١٠	- الترجمة.....
١٠	- المؤقت الزمني.....
١٠	- اعدادات متقدمة.....
١١	- اعدادات القناة.....
١١	- الفلاشة.....

الفصل ٤ : وظائف متقدمة

١٢	تنبيه وأسئلة متكررة.....
١٢	قسم المراجع.....

الفصل ٥ : معلومات أخرى

١٣	إستكشاف الأخطاء وإصلاحها.....
١٣	تركيب القاعدة.....
١٣	الملحقات.....
١٤	ملاحظات هامة.....

الفصل ٦ : التعليمات

١٤	تعليمات هامة.....
----	-------------------

الفصل ٧ : دليل التثبيت

١٤	دليل التثبيت.....
----	-------------------

TORNADO

OWNER MANUAL

دليل المالك

LED TV Product

منتج تلفزيون ليد

ES4600E

ES4600G

ES4600X

ES4600E-A

ES4600G-A

ES4600X-A