

TORNADO

Model
TNC-600



Thanks for Choosing Tornado
Electric Pot

ELARABY

19319  elarabygroup.com
 TORNADO

تعليمات أمنية هامة

١. اقرا كل التعليمات قبل الاستخدام.

٢. قبل توصيل الجهاز بمصدر الطاقة ، تأكد من أن الجهد الموضح على الجهاز يتوافق مع الجهد الكهربائي في منزلك . اذا لم يكن الأمر كذلك ، فاتصل بالموزع وتوقف عن استخدام الجهاز.
٣. يرجى استخدام مصدر طاقة مع حماية التأريض لضمان السلامة الشخصية.
٤. يجب وضع المنتج على منصة ثابتة وتشغيله في مكان بعيد عن متناول الاطفال.
٥. هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الاطفال) الذين يعانون من ضعف القدرات الجسدية أو الحسية أو العقلية ، أو نقص الخبرة والمعرفة ، ما لم يتم منحهم الاشراف أو التعليمات المتعلقة باستخدام الأجهزة من قبل شخص مسؤول عن سلامتهم.
٦. يجب مراقبة الاطفال للتأكد من أنهم لا يلعبون بالجهاز.
٧. لا تستخدم هذا الجهاز على أو بالقرب من سطح الاشياء القابلة للحرارة مثل السجاد والبلاستيك. يجب عدم وضع الاشياء التي تتلف بالبخر بسهولة فوق هذا الجهاز.
٨. لا تفرط في الضغط عند الضغط على «مفتاح التشغيل» لمنع تلفها.
٩. اذا امتلأ الوعاء الكهربائي بشكل زائد ، فقد ينسكب الماء المغلي.
١٠. عند استخدام الجهاز لأول مرة ، يرجى استخدام قطعة قماش قطنية لتنظيف الخزان الداخلي المصنوع من الفولاذ المقاوم للصدأ والغطاء الزجاجي وما إلى ذلك ، ثم إضافة الماء لتشغيل الجهاز، وجعل الجهاز يستمر في التسخين حتى يغلي الماء لإجراء التطهير.
١١. اذا تم تشغيل المنتج بدون ماء ، فيرجى إضافة الماء إلى المنتج أو افصل قابس الطاقة . لا تلمس لوحة التسخين بيدك لمنع الحروق.
١٢. سيتم رش كمية كبيرة من البخار من فتحة البخار عند تشغيل المنتج ، لذا يرجى الحرص على تجنب الاحتراق بالبخار.
١٣. لا تقم ابدا بطهي الأطعمة اللزجة بشكل خاص مثل السكر والحليب وما إلى ذلك باستخدام هذا الجهاز.
١٤. الجهاز لديه وظيفة الحماية من الحرارة الزائدة . اذا كنت بحاجة إلى طهي الطعام بشكل مستمر ، يجب أن تترك الجهاز يبرد بشكل صحيح قبل طهي الطعام للمرة الثانية. اضغط على «مفتاح التشغيل» مرة أخرى بعد إعادة ضبط منظم الحرارة.
١٥. لا تغمر جسم الجهاز في الماء أو السوائل الأخرى أثناء التنظيف. لا تسمح بتدفق السائل إلى الجسم لتجنب التلف.
١٦. في حالة تلف سلك الإمداد ، يجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة الخاص بها أو شخص مؤهل مماثل لتفادي أي خطر.
١٧. افصله من المنفذ عندما لا يكون قيد الاستخدام وقبل التنظيف ، اتركها لتبرد قبل وضع الأجزاء أو نزعها وقبل تنظيف الجهاز.
١٨. لا تقم بتشغيل اي جهاز به سلك أو قابس تالف و بعد تعطل الجهاز او تعرضه للتلف بأي شكل من الأشكال إعادة الجهاز إلى مركز خدمة معتمد لفحصه أو إصلاحه أو تعديله.
١٩. قد يؤدي استخدام ملحق غير موصي به من قبل الشركة المصنعة للجهاز إلى نشوب حريق أو حدوث

إجراءات حماية هامة

صدمة كهربائية أو إصابة شخصية.

٢٠. لا تستخدم الجهاز في الهواء الطلق.

٢١. لا تدع السلك يتدلى على حافة الطاولة أو العداد ، أو تلمس السطح الساخن.

٢٢. لا تضعه على أو بالقرب من موقد غاز أو موقد كهربائي أو في فرن ساخن.

٢٣. لا تستخدم الجهاز في غير الاستخدامات المقصودة.

٢٤. لا تقم بتنظيف الحاوية بمنظفات أو وسادات من الصوف الصلب او أي مادة كاشطة أخرى.

٢٥. لقطع الاتصال ، قم بتشغيل اي عنصر تحكم على «إيقاف التشغيل» قم بإزالة القابس من

مقبس الحائط. دائما امسك القابس لكن لا تسحب الحبل.

٢٦. هذا الجهاز مخصص للاستخدام في المنزل والتطبيقات المماثلة مثل :

* مناطق الموظفين في المتاجر والمكاتب وبيئات العمل الأخرى.


* منازل المزرعة.

* من قبل العملاء في الفنادق والموتيلات وغيرها من البيئات السكنية.

* بيئات نوع المبيت الافطار.

٢٧. احتفظ بهذه التعليمات.

تعرف على الوعاء الكهربائي الخاص بك

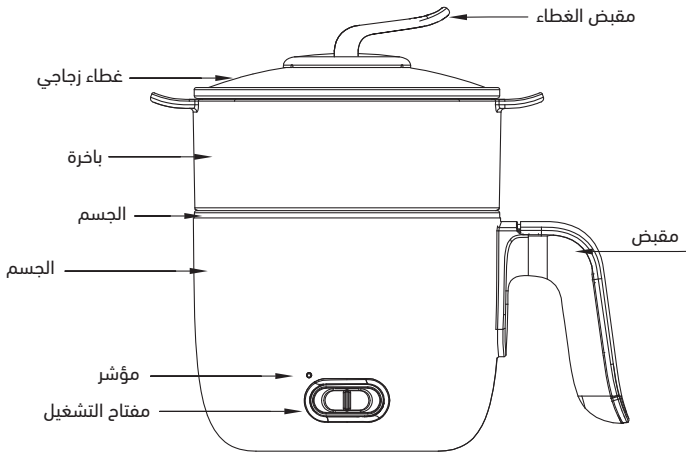

قبل استخدام الوعاء الكهربائي

١. يرجى التحقق والتأكد من أن جميع الملحقات سليمة.
٢. قبل استخدام الجهاز ، يرجى تنظيف التجويف الداخلي المصنوع من الفولاذ المقاوم للصدأ والبخار بقطعة قماش قطنية وخاصة الجزء من الحافة ، والذي يمكن من خلاله إزالة الأوساخ المتبقية على منتجات الفولاذ المقاوم للصدأ ، ثم املاً الوعاء وتشغيل لمدة ٢٠ دقيقة تقريباً لإجراء التطهير. ليصبح اللان الوعاء الكهربائي جاهز للاستخدام.

وصف لتشغيل المنتج

- ١.١ اضغط على «مفتاح التشغيل» إلى الإعداد اوتبلغ طاقة التسخين حوالي ٣٠٠-٣٦٠ واط ويضئ المؤشر ويبدأ الجهاز في العمل.
- ١.٢ اضغط على «مفتاح التشغيل» الي الإعداد اوتكون طاقة التسخين ٦٠٠-٧٢٠ واط ، ويضئ المؤشر ويبدأ الجهاز في العمل.
- ١.٣ اضغط على «مفتاح التشغيل» إلى الإعداد 0 يتم إيقاف تشغيل الجهاز ولا يعمل.
٢. سيتم إيقاف تشغيل الجهاز تلقائياً وسينطفئ المؤشر عندما ينقص الماء أو يعمل بدون ماء.
٣. حماية الغليان الجاف. يوجد جهاز حماية من الحرارة الزائدة مجهز في الجزء السفلي. قد يتم إيقاف تشغيل الجهاز تلقائياً ثم تشغيله بدون ماء او احتراق الجزء السفلي من الجهاز ، لذا يرجى تحريك الطعام في الوقت المناسب عند طهي الأطعمة الأكثر لزوجة.
٤. أدر «مفتاح التشغيل» إلى الإعداد 0 وافصله عند عدم استخدام الجهاز.

تعليمات التشغيل

- ملاحظة : أثناء عمل الجهاز، يرجى عدم لمس الغطاء الزجاجي بيدك لتجنب الحروق، ولا علي الموضع بالقرب من منفذ البخار لتجنب الحروق.
- ملاحظة : يجب ألا يدخل الماء إلى القاعدة وواجهة الطاقة عند تشغيل الجهاز وتنظيفه ! اقترح فتح الغطاء أو إزالته لإنشاء فجوة لمنع المياه من التدفق إلى واجهة الطاقة ثناء الطهي.

غلي الماء

١. قم بإزالة الغطاء الزجاجي، نظف الغطاء الزجاجي والوعاء المصنوع من الفولاذ المقاوم للصدأ، واملاً الوعاء بالماء بما لا يتجاوز الحد الأقصى لمستوى الماء ، ثم أغلق الغطاء الزجاجي.
٢. قم بتوصيل نهاية سلك الطاقة بمقبس الوعاء الكهربائي و قم بتوصيل قابس المثلث بمقبس الطاقة، ثم اضغط على «مفتاح التشغيل» في الإعداد ١ أو اويضئ المؤشر ويبدأ الجهاز في العمل.
٣. عندما ينضج الماء ، سيبدأ الماء في الغليان بعد ١٠ دقائق عندما يعمل الجهاز في وضع العندما يتم غلي الماء جيداً ، قم بإيقاف تشغيل «مفتاح التشغيل» وافصل الجهاز.

طبخ المعكرونة وتانغ يوان والزلاية

١. قم بإزالة الغطاء الزجاجي واملأ الإناء بماء لا يتجاوز مستوى الماء الأقصى، ثم أغلق الغطاء الزجاجي.
٢. قم بتوصيل نهاية سلك الطاقة بمقبس الوعاء الكهربائي وقم بتوصيل قابس المثلث بمقبس الطاقة إلى الإعداد ١١ ووضئ المؤشر وابدأ الجهاز في العمل.
٣. حوالي ١٠ دقائق ، يبدأ الماء في الوعاء في الغليان، ثم ضع المعكرونة أو تانغ يوان أو المراقبة في الوعاء ، في ذلك الوقت، ستنخفض درجة الحرارة داخل الوعاء ، ثم قلب الطعام بالتساوي باستخدام عيدان تناول الطعام أو ملعقة كبيرة. لمنع احتراق الجزء السفلي ، قم بتحويل مفتاح التشغيل إلى الإعداد ١ واجعل الجهاز يستمر في العمل حتى طهي الطعام في الوعاء جيدا.

: CHAFFY dish

١. قم بإزالة الغطاء الزجاجي واملأ الوعاء بماء لا يتجاوز مستوى الماء الأقصى، ثم أغلق الغطاء الزجاجي.
٢. قم بتوصيل نهاية سلك الطاقة بمقبس الوعاء الكهربائي وقم بتوصيل قابس المثلث بمقبس الطاقة، ثم اضغط على «مفتاح التشغيل» إلى الإعداد ١١ ووضئ المؤشر وابدأ الجهاز في العمل.
٣. حوالي ١٠ دقائق، يبدأ الماء في الوعاء في الغليان ، ثم ضع مواد الطبق في الوعاء، في ذلك الوقت ، ستنخفض درجة الحرارة داخل الوعاء ، ثم قلب الطعام بالتساوي باستخدام عيدان تناول الطعام أو ملعقة كبيرة. لمنع احتراق الجزء السفلي ، أدر «مفتاح التشغيل» إلى الإعداد ١ واجعل الجهاز يستمر في العمل حتى يتم طهي الطعام في الوعاء جيدا. يمكنك التبديل بين الإعداد ١ و ١١ وفقا للحالة الفعلية.

بيض صيني على البخار

١. قم بإزالة الغطاء الزجاجي واملأ الوعاء بكمية مناسبة من الماء ، بحيث يكون مستوى الماء على بعد ٢-١ سم من قاع الوعاء، ثم في الوعاء كسر قشرة البيض وضع بيض البيض وصفار البيض في وعاء تبخير وغيرها الأواني، ثم اضع التوابل والماء واخلطهم بالتساوي، وأخيرا أغلق الغطاء الزجاجي.
٢. قم بتوصيل نهاية سلك الطاقة بمقبس الوعاء الكهربائي وقم بتوصيل قابس المثلث بمقبس الطاقة، ثم اضغط على «مفتاح التشغيل» إلى الإعداد ١١ ووضئ المؤشر وابدأ الجهاز في العمل.
٣. حوالي ١٠ دقائق، يتم طهي البيض اللذيذ على البخار جيدا. طهي البيض ، سخن الخبز على البخار وكعكة محشوة على البخار، سخن الحليب وتسخين الوجبات :
١. قم بإزالة الغطاء الزجاجي واملأ الوعاء بكمية مناسبة من الماء، بحيث يكون مستوى الماء على بعد ٢-١ سم من قاع الوعاء ، ثم الوعاء وضع البيض (ملاحظة : يجب أن يكون للبيض ثقب صغير على أحدها الجانب لتجنب التشقق في عملية التبخير)، الخبز على البخار، الخبز المحشو على البخار ، الحليب او الوجبة على رف التبخير ، أخيرا ، أغلق الغطاء الزجاجي.
٢. قم بتوصيل نهاية سلك الطاقة بمقبس الوعاء الكهربائي وقم بتوصيل قابس المثلث في مقبس الطاقة ، ثم اضغط على «مفتاح التشغيل» ال لإعداد ١١ ووضئ المؤشر وابدأ الجهاز في العمل.
٣. ينضج الطعام جيدا بعد ٨-١٠ دقيقة.

طهي العصيدة وعمل الحساء

١. قم بإزالة الغطاء الزجاجي واملأ الوعاء بماء لا يتعدى الحد الأقصى لمستوى الماء، ثم ضع الأطعمة في الوعاء الداخلي وأغلق الغطاء الزجاجي.
٢. قم بتوصيل نهاية. سلك الطاقة بمقبس الوعاء الكهربائي وقم بتوصيل قابس المثلث في مقبس الطاقة، ثم اضغط على «مفتاح التشغيل» إلى الإعداد الويضي المؤشر ويبدأ الجهاز في العمل.
٣. عند غلي الطعام في الوعاء، أدر «مفتاح التشغيل» إلى الإعداد لمنع احتراق قاع الوعاء.

التنظيف والصيانة

١. فصل الجهاز دائما عن مأخذ الطاقة واتركه يبرد تماما قبل التنظيف.
٢. يمكن تنظيف الوعاء الداخلي والغطاء الزجاجي والبخار بإسفنجة مغموسة بمنظف. لا تستخدم أداة تنظيف من الفولاذ الصلب لمنع تلف السطح.
٣. امسح الجسم بمنشفة مبللة اذا كان الجسم متسخا. لا تغمر الجسم في الماء ابدا لتجنب الصدمة الكهربائية.
٤. عندما لا يتم استخدام المنتج لفترة طويلة، يرجى تنظيفه جيدا ووضعه في صندوق التعبئة ، ثم تخزينه في مكان جاف مع مسودة جيدة.
٥. قد يظهر الجزء السفلي من الجهاز ظاهرة التبييض عند تشغيل الجهاز، وهذا أمر طبيعي ولا يؤثر على العملية ولن يضر بجسم الإنسان . ذلك لأن انبوب التسخين يسخن بشكل مباشر سطح الفولاذ المقاوم للصدأ ، وقد يحدث أكسدة طفيفة عندما يلمس سطح الفولاذ المقاوم للصدأ مع الماء ، إلى جانب ذلك ، تختلف جودة المياه في مناطق مختلفة ، لذلك هناك رواسب شوائب صفراء تنتج عند التسخين. اتبع العملية على النحو التالي لإزالة الترسبات الكلسية : أضف الخل الأبيض والماء (بالنسبة : ١:٢) في الوعاء وقم بتشغيل الجهاز حتى يغلي المحلول ، ثم اتركه جانبا لمدة ساعة تقريبا ، وبعد ذلك قم بإفراغ المحلول ونظف الوعاء بالماء النظيف مرتين.
٥. لا تضع ملحقات المنتج على غسالة الأطباق للتنظيف.

التخلص من الجهاز الصديق للبيئة



يمكنك المساعدة في حماية البيئة!
يرجى تذكر احترام القوانين المحلية: تُسلم الأجهزة الكهربائية
التي لا تعمل إلى مركز التخلص من النفايات المناسب.

ELARABY

19319  elarabygroup.com
 **TORNADO**

Cleaning And Maintenance

Always disconnect the appliance from the power outlet and allow it cooling down completely before cleaning.

1. The inner pot, glass lid and steamer can be cleaned with a sponged dipped with detergent. Do not use hard steel cleaning tool to prevent the surface being damaged.
2. Wipe the body with a wet towel if the body is dirty. Never immerse the body into the water to avoid electric shock.
3. When the product is not used for a long time, please clean it well and put it in the packing box, then store it at a dry place with good draft.
4. The bottom of the appliance may appear whitening phenomenon when the appliance is operating, this is normal, and it will not affect the operation and will not do harm to the human body. That is because the heating tube directly heats up the stainless steel surface, and slight oxidation may happen when the stainless steel surface contacts with the water, besides, the water quality varies in different areas, so there will be yellowish impurities deposit produced when heating. Follow the operation as below to remove the scale: add white vinegar and water (ratio: 1:2) into the pot and run the appliance until the solution is boiled, then leave it aside for about 1 hour, after it, empty the solution and clean the pot with clean water twice.
5. Do not put product accessories in the dishwasher for cleaning.

Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.



Operation Instruction

egg white and yolk into the steaming bowl or other utensils, then add some seasonings and water and mix them evenly, finally, close the glass lid.

2. Plug the end of the power cord into the socket of electric pot and plug the triangle plug into the power socket, then press the “Power switch” to the “II” setting, the indicator lights up and the machine starts working.

3. About 10 minutes, the delicious Chinese steamed eggs is cooked well.

V. Cook Egg, Heat Steamed Bread And Steamed Stuffed Bun, Heat Milk And Heat Meals

1. Remove the glass lid and fill the pot with appropriate amount of water, the water level is 1-2cm away from the pot bottom, then put the steamer onto the pot and put the egg(Note:Eggs should have a small hole on one side to avoid cracking in the process of steaming.), steamed bread, steamed stuffed bun, milk or meal on the steaming rack, finally, close the glass lid.

2. Plug the end of the power cord into the socket of electric pot and plug the triangle plug into the power socket, then press the “Power switch” to the “II” setting, the indicator lights up and the machine starts working.

3. The food is cooked well after 8-15 minutes.

Vi. Cook Porridge And Make Soup

1. Remove the glass lid and fill the pot with water not exceeding the maximum water level, then put the foods into the inner pot and close the glass lid.

2. Plug the end of the power cord into the socket of electric pot and plug the triangle plug into the power socket, then press the “Power switch” to the “II” setting, the indicator lights up and the machine starts working.

3. When the food in the pot is boiled, turn the “Power switch” to the “I” setting to prevent the pot bottom from being burnt.

Operation Instruction

3. When the water is cooked , The water will begin to boil after about 10 minutes when the appliance works under “II” setting. When the water is boiled well, turn off the “Power switch” and unplug the appliance.

II. Cook Noodles, Tang-Yuan And Dumplings

1. Remove the glass lid and fill the pot with water not exceeding the maximum water level, then close the glass lid.
2. Plug the end of the power cord into the socket of electric pot and plug the triangle plug into the power socket, then press the “Power switch” to the “II” setting, the indicator lights up and the machine starts working.
3. About 10 minutes, the water in the pot starts to boil, then put noodles, tang-yuan or dumplings into the pot, at that time, the temperature inside the pot will decrease, then stir the food evenly with chopsticks or tablespoon. To prevent the bottom from being burnt, turn the “Power switch” to the “I” setting and make the appliance continue working until the food in the pot is cooked well.

III. CHAFFY DISH

1. Remove the glass lid and fill the pot with water not exceeding the maximum water level, then close the glass lid.
2. Plug the end of the power cord into the socket of electric pot and plug the triangle plug into the power socket, then press the “Power switch” to the “II” setting, the indicator lights up and the machine starts working.
3. About 10 minutes, the water in the pot starts to boil, then put the materials of chaffy dish into the pot, at that time, the temperature inside the pot will decrease, then stir the food evenly with chopsticks or tablespoon. To prevent the bottom from being burnt, turn the “Power switch” to the “I” setting and make the appliance continue working until the food in the pot is cooked well. You can make switch between “I” and “II” setting according to the actual condition.

IV. CHINESE STEAMED EGGS

1. Remove the glass lid and fill the pot with appropriate amount of water, the water level is 1-2cm away from the pot bottom, then put the steamer onto the pot. Break the shell of eggs and put the

Before Using Your Electric Pot

1. Please check and make sure all the accessories are intact.
2. Before using the appliance, please clean the stainless steel inner cavity and steamer with a cotton cloth, especially the part of edge, by which the residual dirt on the stainless steel products can be removed, then fill the pot with water and run for about 20 minutes to perform disinfecting. Until now, the electric pot is ready for use.

Description For The Product Operation

1. Power switch

1.1 Press the "Power switch" to "I" setting, the heating power is about 300-360W, the indicator lights up and the machine starts to run.

1.2 Press the "Power switch" to "II" setting, the heating power is 600-720W, the indicator lights up and the machine starts to run.

1.3 Press the "Power switch" to "O" setting, the machine turns off and does not work.

2. The appliance will turn off automatically and the indicator will extinguish when the appliance is lack of water or operated without water.

3. Boil-dry protection. There is a overheating protection device equipped at the bottom. The appliance may turn off automatically if it is operated without water or the bottom of the appliance is burnt, so please stir the food in time when cooking the foods which are more viscous.

4. Turn the "Power switch" to "O" setting and unplug when the appliance is not used.

Operation Instruction

NOTE: When the appliance is working, please do not touch the glass lid with your hands to avoid burns, and do not touch the position near the steam outlet to avoid burns.

NOTE: There shall be no water enter into the base and power interface when operating and cleaning the appliance! Suggest opening or removing the lid to create a gap to prevent the water from overflowing to the power interface to cause a trip.

I. BOIL WATER

1. Remove the glass lid, clean the glass lid and stainless steel pot, fill the pot with water not exceeding the maximum water level, then close the glass lid.

2. Plug the end of the power cord into the socket of electric pot and plug the triangle plug into the power socket, then press the "Power switch" to the "I" or "II" setting, the indicator lights up and the machine starts working.

Important Safety Instructions

manner. Return appliance to an authorized service facility for examination, repair or adjustment.

19. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.

20. Do not use outdoors.

21. Do not let cord hang over edge of table or counter, or touch hot surface.

22. Do not place on or near a hot gas or electric burner, or in a heated oven.

23. Do not use appliance for other than intended use.

24. Do not clean container with cleansers, steel wool pads, or other abrasive material.


25. To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug. But never pull the cord.

26. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

27. Save these instructions.

Know Your Electric Pot

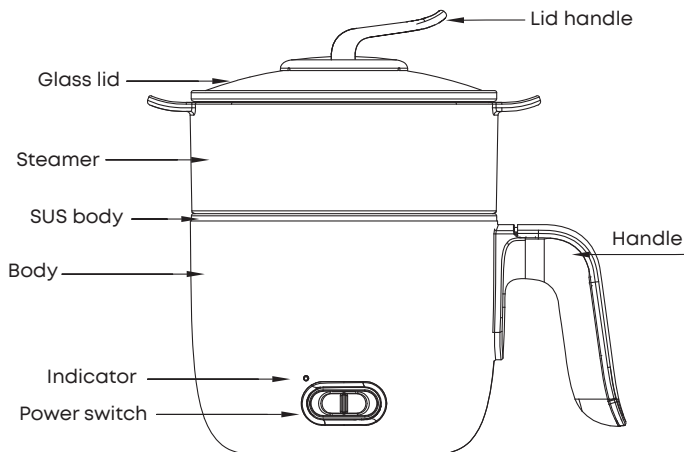

Important Safety Instructions

1. Read all instructions before using.
2. Before connecting the appliance to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the appliance.
3. Please use a power supply with grounding protection to ensure personal safety.
4. The product should be placed on a stable platform and operated at a place out of the reach of children.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Do not use this appliance on or near the surface of heat-labile objects such as carpets and plastics. Objects that are easily damaged by steam should not be placed above this appliance.
8. Do not overexert when press the "Power switch" to prevent the it from being damaged.
9. If the electric pot is overfilled, boiling water may spill out.
10. When the appliance is used for the first time, please use a cotton cloth to scrub the stainless steel inner tank and glass cover etc., then add water and activate the appliance, make the appliance keep heating until the water boils to perform disinfecting.
11. If the product has been operated without water, please add water to the product or unplug the power plug. Do not touch the heating plate with your hand to prevent burns.
12. A large amount of steam will be sprayed from the steam hole when the product being operated, so please carefully to avoid being burned by steam.
13. Never cook the foods which are particularly viscous such as sugar, milk and so on with this appliance.
14. The appliance has overheating protection function. If you need to continuously cook food, you must let the machine cool properly before cooking the food for the second time. Press the "Power switch" again after the thermostat is reset.
15. Do not immerse the body into the water or other liquids during cleaning. Do not allow liquid to flow into the body to avoid danger.
16. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
17. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
18. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any

TORNADO



موديل
TNC-600

شكراً لاختيارك حلة كهربائية - تورنيدو

حلة كهربائية
دليل التشغيل

هذه العلامة توريدو هي علامة تجارية مسجلة خاصة بشركة العربي

ELARABY

19319  elarabygroup.com
 TORNADO