HOOVER

TX1600 020

USER MANUAL (GB) ..... P 01

P05 .....(AR) دليل المستخدم

BORN INNOVATIVE

MADE IN CHINA
48023543

BORN INNOVATIVE

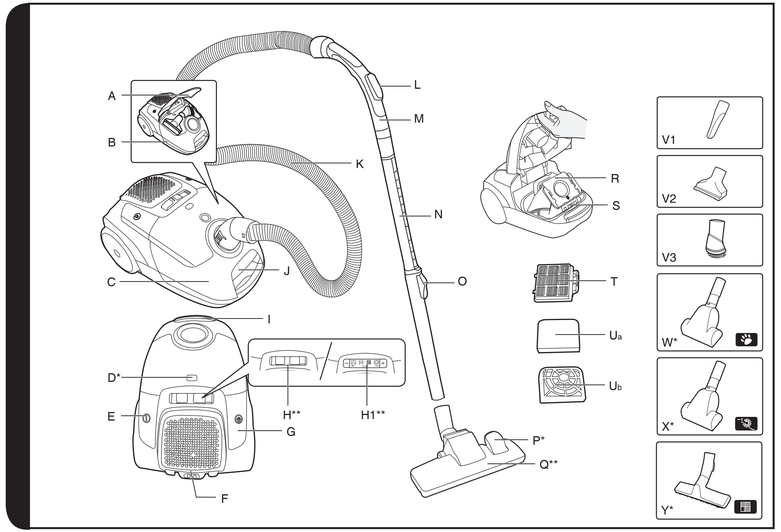

*Certain Models Only **May vary according to models

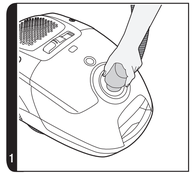

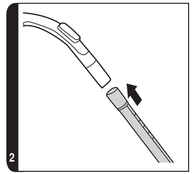

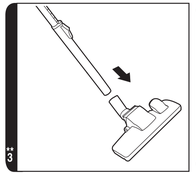

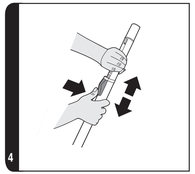

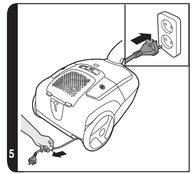

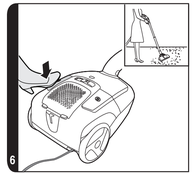

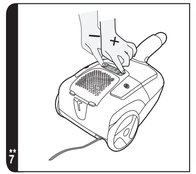

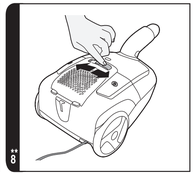

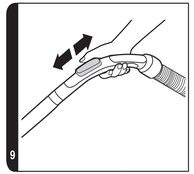

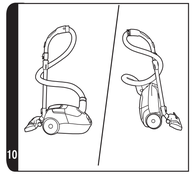

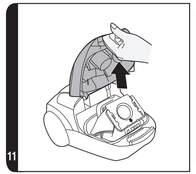

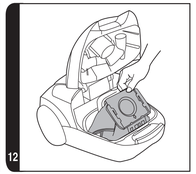

*Certain Models Only **May vary according to models

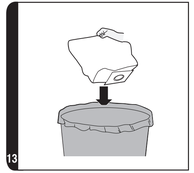

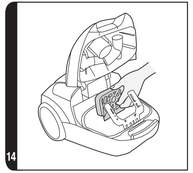

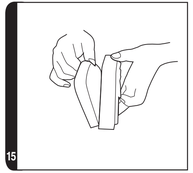

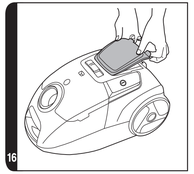

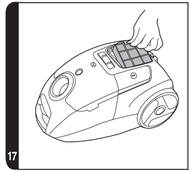

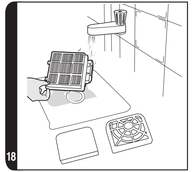

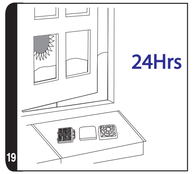

*Certain Models Only **May vary according to models

INSTRUCTIONS FOR SAFE USE

This appliance should only be used for domestic cleaning, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

Do not leave the appliance plugged in. Always switch off and remove the plug from the socket after use, or before cleaning the appliance or any maintenance task.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised HOOVER service engineer must replace the power cord.

Keep hands, feet, loose clothing and hair away from rotating brushes.

Use only attachments, consumables or spares recommended or supplied by HOOVER.

Static electricity: Some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.

Do not use your appliance out of doors or on any wet surface or for wet pick up.

Do not pick up hard or sharp objects, matches, hot ashes, cigarette ends or other similar items.

Do not spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours.

Do not run over the power cord when using your appliance or remove the plug by pulling on the power cord.

Do not continue to use your appliance if it appears faulty.

HOOVER service: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised HOOVER service engineer.

Do not stand on or wrap the cord around arms or legs when using your appliance.

Do not use the appliance to clean animals or people.

Do not position the appliance above you when cleaning the stairs.

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.

CANDY HOOVER GROUP S.r.l. Via Privata Eden Fumagalli, 20861 Brugherio (MB) Italy

GETTING TO KNOW YOUR CLEANER

A. Accessory Door
B. Main Cleaner
C. Bag Door
D. Mechanical Bag Check Indicator*
E. On/Off Pedal
F. Exhaust Filter Cover
G. Cord Reel Pedal
H. Variable Power Control Slider**
H1. LED Display Screen With Variable Power Controls** and Led Bag Check Indicator*
I. Carry Handle
J. Bag Door Release Latch
K. Hose
L. Suction Regulator
M. Hose Handle
N. Telescopic Tube
O. Telescopic Tube Adjuster
P. Floor Type Selector Pedal*
Q. Carpet and Floor Nozzle**
R. Bag
S. Bag Holder
T. Exhaust Filter
Ua. Pre-Motor Filter
Ub. Pre-Motor Filter Frame
V. Accessory Set
W1. Crevice Tool
W2. Furniture Nozzle
W3. Dusting Brush
W. Pet Hair Remover Mini Turbo Nozzle*
X. Allergen Remover Mini Turbo Nozzle*
Y. Parquet Nozzle*

ASSEMBLING YOUR CLEANER

Remove all components from the packaging.

1. Connect the hose to the cleaner main body, ensuring it clips and locks into position. To release the hose: simply press the two latches on the hose end and pull. **[1]**
2. Connect the hose handle to the upper tube end. **[2]**
3. Connect the tube lower end to the carpet and floor nozzle** or accessories if required. **[3]**

USING YOUR CLEANER

1. Extract power cord and plug it into the power supply. Do not pull the cord beyond the red marker. **[5]**
2. Adjust the telescopic tube to the desired height by moving the telescopic tube and raise or lower the tube to the most comfortable cleaning position. **[4]**
3. After connecting the telescopic tube lower end to Carpet and Floor Nozzle** or accessories if required, press the floor type selector* pedal on the nozzle to select the ideal cleaning mode for the floor type.
   Hard Floor – Brushes are lowered to protect the floor.
   Carpet – Brushes are raised for deeper cleaning.
4. Switch the cleaner on by pressing the On/Off Pedal on the cleaner main body. **[6]**
5. Adjust the power level by pressing the variable power control buttons on the display** **[7]** or by adjusting the variable power control slider**. **[8]**
6. Adjust the suction regulator to the desired level.**[9]**
7. Switch off at the end of use by pressing the On/Off Pedal. Unplug and extract power cord again to wind the power cord back into the cleaner.
8. Parking and Storage - The tube can be parked for temporary storage while in use, or in the storage position when not in use. **[10]**

ACCESSORIES

The Crevice tool, Furniture nozzle and Dusting brush are stored on board under the accessories door.
All accessories can be fitted to the end of the handle or the end of the telescopic tube.

Accessory Set:
Crevice Tool – For corners and hard to reach areas. **[V1]**
Furniture Nozzle – For soft furniture and fabrics.**[V2]**
Dusting Brush – For bookshelves, frames, keyboards and other delicate areas. **[V3]**
Parquet Nozzle* – For parquet floors and other delicate floors. **[Y]**
Pet Hair Remover Mini Turbo Nozzle* - Use the mini turbo nozzle on stairs or for deep cleaning on textile surfaces and other hard to clean areas. Particularly suitable for pet hairs removal**. [W]**
Allergen Remover Mini Turbo Nozzle* – Use the mini turbo nozzle on stairs or for deep cleaning on textile surfaces and other hard to clean areas, particularly suitable for allergen removal. **[X]**
IMPORTANT: Do not use mini turbo nozzles on rugs with long fringes, animal hides and carpet pile deeper than 15mm. Do not keep the nozzle stationary while brush is rotating.

Certain Models Only** * May vary according to model**

CLEANER MAINTENANCE

For models equipped with LED bag check indicator***(see H1)**, both full bag and obstructions are signaled by a red light on the display.
For models equipped with the other type of bag check indicator* **(see D)**, the mechanism turns red if bag is full and if obstructions occur.

Replacing the Dust Bag
If the bag check indicator turns red on the bag door* **(see D)**, or on the display***(see H1)** please check the bag and, if necessary, replace with it.

1. Lift the bag door release latch, open the bag door and remove the bag. **[11,12]** The full dust bag should be disposed correctly and carefully. **[13]**
2. Fold a new bag as shown on the bag and fit by inserting the collar into the bag holder. **[12]**
3. Close the bag door.

WARNING: The bag door will NOT close if the dust bag and/or the bag holder are not assembled to the cleaner. Always ensure the bag is present when closing the bag door.
REMEMBER: The bag check indicator also turns red **(D or H1)**** if an obstruction has occurred. In this case refer to 'remove A Blockage From the System'.

Cleaning the Filters
To ensure constant optimum performances from your cleaner, please wash the filters after each 5 bag changes.

Cleaning the pre-motor filter:

1. Lift the bag door release latch to open bag door and remove the bag. **[11,12]**
2. Remove the pre-motor filter frame from the cleaner. **[14]**
3. Remove the filter from the pre-motor filter frame. **[15]**
4. Wash the pre-motor filter and the pre-motor filter frame using hand warm water, and allow it to dry thoroughly before inserting into the cleaner.**[18,19]**

Cleaning the exhaust filter

1. Remove the exhaust filter, unclip the exhaust filter cover and remove the exhaust filter pack. **[16,17]**
2. Wash the exhaust filter pack in hand warm water, and allow it to dry thoroughly before inserting into the cleaner. **[18,19]**

Remember: Do not use hot water or detergents. In the unlikely event of the filters becoming damaged, fit a Genuine Hoover replacement. Do not try and use the product without a dust bag or filters fitted.

Cleaning the permanent cloth dust bag* (*Certain model only)
To maintain optimum performance we recommend that you wash the permanent cloth dust bag after every 5 full bags. Empty the contents of the bag into a bin, wash the bag under warm water, remove excess water and leave to dry fully before replacing.

Removing a blockage from the system
If the bag check indicator turns red***(D)** or remains lit***(H1)**:
1. Check if the bag is full. If so refer to 'Replacing The Dust Bag'.
2. If it is not full, then:
   A. Do the filters need cleaning? If so refer to 'Cleaning the Filters'.
   B. Check if there is any other blockage in the system
      - Use a cord or a stick to remove any blockage from the telescopic tube or flexible hose.

Warning - The bag check indicator will remain red*or lit* if the cleaner is used when the bag is full, if there is a blockage or if the filters are dirty. If the cleaner is used for a significant period of time with the bag check indicator illuminated, an thermal cut out will switch the cleaner off to prevent overheating. The bag check indicator turns off once the cleaner has switched off to signal that the thermal cut out has been activated. If this should happen, switch the cleaner off, unplug and correct the fault. It will take about 30 minutes for the cut out to automatically.

USER CHECKLIST

Should you have a problem with the product, complete this simple user checklist before calling your local Hoover service.

- Is there a working electricity supply to the cleaner? Please check with another electrical appliance.
- Is the dust bag over-filled? Please refer to 'Cleaner Maintenance.
- Is the Filter blocked? Please refer to 'Cleaning the filter.
- Is the hose or nozzle blocked? Please refer to 'Removing a blockage from the system.
- Has the cleaner overheated? If so, it will take approximately 30 minutes to automatically reset.

IMPORTANT INFORMATION

Hoover spares and Consumables
Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

Hoover Service
Should you require service at any time, please contact your local Hoover Service Office.

*Certain Models Only ** May vary according to model

Quality
Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001.

Your Guarantee

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.

تعليمات الاستخدام الآمن

تستخدم هذه المكنسة للتنظيف المنزلي فقط، كما هو موضح في دليل المستخدم. يرجى التأكد من فهم هذا الدليل جيدًا قبل تشغيل الجهاز.

لا تترك فيشة المكنسة في مصدر الكهرباء، وقم دائمًا بإيقاف تشغيل المكنسة وانزع القابس من مصدر الكهرباء بعد الاستخدام، أو قبل تنظيف الجهاز أو إجراء أيًا من مهام الصيانة.

يمكن أن يستخدم الأطفال هذا الجهاز من سن 8 سنوات، وكذلك الأشخاص ذوي قدرات بدنية، أو حسية أو عقلية منخفضة، أو من ينقصهم الخبرة أو المعرفة، إذا كانوا تحت إشراف أو إذا حصلوا على تعليمات بشأن استخدام الجهاز بطريقة آمنة وأدركوا المخاطر الناجمة عن استخدامه. يجب ألا يعبث الأطفال بالجهاز، كما يجب ألا يقوم الأطفال بالتنظيف وصيانة المستخدم دون إشراف.
في حالة تلف سلك إمداد الكهرباء، قم بإيقاف تشغيل المكنسة في الحال. ولتجنب المخاطر، يجب أن يقوم مهندس معتمد من هوفر باستبداله.

احرص دائمًا على إبعاد يديك، وقدميك، والملابس الفضفاضة وشعرك بعيدًا عن الفرش الدوارة.

استخدم فقط الملحقات، والقطع الاستهلاكية وقطع الغيار التي توصي بها هوفر أو تلك التي توفرها لك.

الكهرباء الساكنة: قد يتراكم القليل من الكهرباء الساكنة بسبب بعض أنواع السجاد. ولا يسبب التخلص من أي كهرباء ساكنة أي خطر على الصحة.

لا تستخدم مكنستك في الهواء الطلق أو على أي سطح مبلل ولا تلتقط بها شيء رطب.

لا تلتقط الأجسام الصلبة أو الحادة، والثقاب، والرماد الساخن، وبواقي السجائر أو ما شابه.

لا ترش بها أو تلتقط سوائل قابلة للاشتعال، وسوائل التنظيف، والهباء الجوي أو أبخرته.

لا تجري فوق سلك الكهرباء عند استخدام مكنستك، ولا تنزع القابس عن طريق سحب سلك الكهرباء.

لا تستمر في استخدام مكنستك إذا ظهر بها عطل.

خدمة هوفر: لضمان استمرار التشغيل الآمن والفعال لهذا الجهاز، نوصي بأن يقوم فقط مهندس معتمد من هوفر بأي صيانة أو إصلاحات للجهاز.

H ·زر التحكم في الطاقة المتغيرة.

H1. شاشة عرض LED للتحكم في الطاقة المتغيرة** ومؤشر ليد لفحص الكيس.

I · مقبض حمل المكنسة.

J · أزرار فتح باب الكيس.

K ·الخرطوم.

L · منظم الشفط.

M ·مقبض الخرطوم.

N ·أنبوب تلسكوبي.

O ·أنظمة ضبط الأنبوب التلسكوبي.

P ·دواسة اختيار نوع الأرضية.

Q ·فوهة الأرضية والسجاد**

R ·كيس الغبار.

S ·حامل الكيس.

T ·فلتر الغبار.

Ua. فلتر المحرك الأولي.

Ub. إطار فلتر المحرك الأولي.

V ·مجموعة الملحقات.

W1. أداة التفتيت

W2. فوهة تنظيف الأثاث.

W3. فرشاة الغبار.

W. فوهة الميني تربو لإزالة شعر الحيوانات الأليفة*.

X. فوهة الميني تربو لإزالة مسببات الحساسية*.

Y. فوهة الباركيه*.

* في بعض الموديلات فقط

** قد تختلف من موديل لآخر

لا تقف على سلك الكهرباء أو تلفه على ذراعيك أو رجليك عند استخدام المكنسة.

لا تستخدم الجهاز لتنظيف الأشخاص أو الحيوانات.

لا تضع المكنسة أعلاه عند تنظيف الدرج.

البيئة

تشير العلامة على المنتج إلى أن لا يمكن التخلص من هذا المنتج كنفايات منزلية. وبدلًا من ذلك يجب إلقائه في نقطة تجميع مخصصة لإعادة تدوير الأجهزة الكهربائية والإلكترونية. يجب أن يتم التخلص من الجهاز وفقًا للأنظمة البيئية المحلية للتخلص من النفايات. للمزيد من المعلومات التفصيلية عن استخدام، وإصلاح وإعادة تدوير هذا المنتج، يرجى الاتصال بالدائرة المدنية المحلية، أو مركز خدمات التخلص من النفايات المحلية أو المحل الذي اشتريت هذا المنتج منه.

مجموعة كاندي هوفر .S.r.l
Via Privata Eden Fumagalli, 20861 Brugherio (MB) Italy

تعرف على مكنستك:

A ·فتحة الملحقات.

B ·جسم المكنسة الرئيسي.

C ·باب كيس الغبار.

D ·مؤشر فحص الكيس الآلي.

E ·دواسة التشغيل / الإيقاف

F · غطاء فلتر الغبار.

G ·دواسة بكرة السلك.

7 · قم بإيقاف التشغيل بعد الانتهاء من الاستخدام من خلال الضغط على دواسة التشغيل / الإيقاف. افصل سلك الكهرباء واسحبه مرة أخرى ليلتف مرة أخرى داخل المكنسة.

8 · الحفظ المؤقت والتخزين – يمكن حفظ الأنبوب مؤقتًا أثناء الاستخدام، أو في وضع التخزين في حالة عدم الاستخدام [10].

الملحقات

يتم تخزين أداة التفتيت، وفوهة الأثاث وفرشاة الغبار داخل جسم المكنسة أسفل باب الملحقات.

يمكن تركيب كافة الإكسسوارات بنهاية المقبض أو بنهاية الأنبوب التلسكوبي.

مجموعة الملحقات:

أداة التفتيت – للزوايا والمناطق التي يصعب الوصول إليها [V1].

فوهة الأثاث – للأثاث والأقمشة الناعمة [V2].

فرشاة الغبار – لأرفف المكتبات، والأطر، ولوحات المفاتيح والمناطق الدقيقة الأخرى [V3].

فوهة الباركيه* – لأرضيات الباركيه والأرضيات الناعمة الأخرى. [Y]

فوهة الميني تربو لإزالة شعر الحيوانات الأليفة * – استخدم فوهة الميني تربو على الدرج أو للتنظيف العميق لأسطح النسيج وغيرها من المناطق التي يصعب تنظيفها. وتناسب إزالة شعر الحيوانات الأليفة على وجه الخصوص. [W]

فوهة الميني تربو لإزالة مسببات الحساسية * – استخدم فوهة الميني تربو على الدرج أو للتنظيف العميق لأسطح النسيج وغيرها من المناطق التي يصعب تنظيفها. وتناسب إزالة مسببات الحساسية على وجه الخصوص. [X]

هام: لا تستخدم فوهات الميني تربو على السجاد ذو الشراشيب الطويلة، جلود الحيوانات ووبر السجاد عندما يكون أعمق من 15مم. لا تجعل الفوهة ثابتة أثناء دوران الفرشاة.

* في بعض الموديلات فقط

** قد تختلف من موديل لآخر

تركيب مكنستك:

قم بإخراج كافة الأجزاء المكونة من عبوة التغليف.

1 · قم بتوصيل الخرطوم بجسم المكنسة الرئيسي، مع التأكد من أنه مثبت ومغلق بالوضع الصحيح. لفتح الخرطوم: قم ببساطة بالضغط على زراري الفتح بنهاية الخرطوم وأسحب الخرطوم. [1]

2 · قم بتوصيل مقبض الخرطوم بنهاية الأنبوب العليا. [2]

3 · قم بتوصيل نهاية الأنبوب السفلى بفوهة السجاد والأرضية** أو بالملحقات إذا لزم الأمر. [3]

* في بعض الموديلات فقط

** قد تختلف من موديل لآخر

استخدام مكنستك:

1 · قم بإخراج سلك الكهرباء وأوصله بمصدر الكهرباء. ولا تسحب السلك بعد ظهور العلامة الحمراء [5].

2 · اضبط الأنبوب التلسكوبي عند الارتفاع المطلوب عن طريق تحريك الأنبوب التلسكوبي وقم برفع وخفض الأنبوب حتى تصل لأكثر أوضاع التنظيف راحة. [4]

3 · بعد أن تقوم بتوصيل نهاية الأنبوب التليسكوبي السفلى بفوهة السجاد والأرضية** أو بالملحقات إذا لزم الأمر، اضغط على دواسة اختيار نوع الأرضية* الموجودة بالفوهة لاختيار طريقة التنظيف المثلى وفقا لنوع الأرضية.

الأرض الصلبة – تُخفض الفرش لحماية الأرضية.

السجاد: تُرفع الفرش للحصول على أعمق تنظيف.

4 · قم بتشغيل الجهاز بالضغط على دواسة التشغيل / الإيقاف الموجودة بجسم المكنسة الرئيسي. [6]

5 · اضبط مستوى الطاقة بالضغط على أزرار التحكم في الطاقة المتغيرة بشاشة العرض** [7] أو بضبط مزلاج التحكم في الطاقة المتغيرة**. [8]

6 · قم بضبط منظم الشفط وفقا للمستوى المطلوب [9]

تنظيف فلتر المحرك الأولي:

1- ارفع مزلاج فتح باب الكيس لفتح باب الكيس وأخرج الكيس من المكنسة. [11، 12].

2- انزع إطار فلتر المحرك الأولي من المكنسة. [14]

3- انزع الفلتر من إطار فلتر المحرك الأولي. [15]

4- قم بغسل فلتر المحرك الأولي وإطار فلتر المحرك الاولي باستخدام ماء غسيل اليد الدافئ، واتركه ليجف جيدًا قبل وضعه داخل المكنسة. [18، 19]

تنظيف فلتر العادم:

1- انزع فلتر العادم، فك غطاء فلتر العادم وانزع صندوق فلتر العادم. 16]،[17

2- قم بغسل صندوق فلتر العادم بماء غسيل اليد الدافئ، واتركه يجف جيدًا قبل إدخاله مرة أخرى داخل المكنسة 18] ،[19

تذكر: لا تستخدم الماء الساخن أو المنظف. في حال تلف الفلاتر وهذا بعيد الاحتمال، استبدل قطع غيار هوفر الاستهلاكية الأصلية. لا تحاول استخدام المنتج دون كيس الغبار أو دون تركيب الفلاتر.

تنظيف كيس الغبار القماش الثابت (*في بعض الموديلات فقط)

للحفاظ على الأداء الأمثل نوصي بغسل كيس الغبار القماش الثابت مرة بعد أن يمتلئ 5 مرات. قم بتفريغ محتويات الكيس في صندوق القمامة، اغسل الكيس بالماء الدافئ، تخلص من الماء الزائد واتركه ليجف تمامًا قبل إعادته إلى المكنسة مرة أخرى.

صيانة المكنسة

وفي الموديلات التي بها مؤشر LED لفحص الكيس* (انظر H1)، يشار إلى كل من مؤشر امتلاء الكيس ومؤشر وجود عوائق بضوء أحمر بشاشة العرض.

وفي الموديلات المزودة بالنوع الآخر من مؤشر فحص الكيس* (انظر D)، يتحول الجهاز إلى اللون الأحمر إذا كان الكيس ممتلئ وفي حالة وجود عوائق.

استبدال كيس الغبار

إذا تحول لون مؤشر فحص كيس الغبار إلى اللون الأحمر بباب الكيس* (انظر D)، أو على شاشة العرض* (انظر H1) يرجى فحص الكيس، وإن لزم الأمر، استبدل الكيس.

1- ارفع مزلاج فتح باب الكيس، افتح باب الكيس وأخرج الكيس. [11، 12] وتخلص من كيس الغبار الممتلئ على نحو صحيح وبحذر [13].

2- قم بثني كيس جديد كما هو موضح على الكيس وثبته بإدخال طوق الكيس داخل حامل الكيس [12].

3- قم بإغلاق باب الكيس.

تحذير: لن يغلق باب الكيس إذا لم يتم تركيب كيس الغبار و / أو حامل الكيس داخل المكنسة. تأكد دائما من وجود الكيس عند إغلاق باب الكيس.

تذكر: قد يكون مؤشر فحص الكيس أحمر** (D or H1) في حالة وجود انسداد. في هذه الحالة، ارجع إلى " إزالة انسداد من النظام ".

تنظيف الفلاتر

لضمان استمرار الحصول على الأداء الأمثل لمكنستك، يرجى غسل الفلاتر بعد تغيير الكيس خمس مرات.

* في بعض الموديلات فقط

** قد تختلف من موديل لآخر

معلومات مهمة

قطع غيار هوفر وأجزاء المكنسة

قم دائمًا باستبدال أجزاء المكنسة بقطع غيار هوفر الأصلية. إن قطع الغيار الأصلية متوفرة لدى بائع هوفر المحلي أو اتجه مباشرة إلى شركة هوفر، وأبلغهم برقم الموديل عند طلب الأجزاء.

خدمة هوفر

إذا كنت بحاجة إلى خدمتنا في أي وقت، يرجى الاتصال بمركز هوفر المحلي.

الجودة

تم تقييم الجودة بمصانع هوفر على نحو مستقل. تُصنَع منتجاتنا باستخدام نظام للجودة يفي بمتطلبات الأيزو 9001.

ضمان جهازك

يحدد ممثلنا في البلد الذي يباع فيها هذا الجهاز شروط الضمان. ويمكن الحصول على تفاصيل بشأن تلك الشروط من التاجر الذي اشتريت منه الجهاز. يجب إصدار فاتورة البيع أو فاتورة الاستلام عند اتخاذ أي إجراء بموجب أحكام هذا الضمان.

يخضع للتعديل دون إشعار.

إزالة انسداد من النظام

إذا تحول لون مؤشر فحص الكيس إلى اللون الأحمر* (D)أو إذا ظل مضاء* (H1):

1- تأكد ما إذا كان كيس الغبار ممتلئ. إذا كان الأمر كذلك راجع " استبدال كيس الغبار ".

2- إذا كان كيس الغبار غير ممتلئ:

أ · هل تحتاج الفلاتر إلى تنظيف؟ إذا كان الأمر كذلك ارجع إلى " تنظيف الفلاتر ".

ب ·تأكد ما إذا كان هناك أي انسداد أخر بالجهاز

– استخدم عود أو عصا للتخلص من أي انسداد في الأنبوب التليسكوبي أو الخرطوم المرن.

تحذير – سيظل لون مؤشر فحص الكيس أحمر أو سيظل مضاء إذا تم استخدام المكنسة والكيس ممتلئ، في حالة وجود انسداد أو إذا كانت الفلاتر متسخة. إذا استخدمت المكنسة لفترة من الزمن مع استمرار إضاءة مؤشر فحص الكيس، ستتوقف الحرارة فجأة وتتوقف المكنسة لتجنب الحرارة الزائدة. ينطفئ مؤشر فحص الكيس بمجرد إيقاف تشغيل المكنسة للإشارة إلى توقف الحرارة. إذا حدث ذلك، قم بإيقاف تشغيل المكنسة، وانزع القابس وأصلح العطل. ويستغرق ذلك حوالي 30 دقيقة لإعادة الحرارة تلقائيًا.

قائمة المستخدم المرجعية

إذا كان لديك مشكلة بالمنتج، راجع هذه القائمة المرجعية البسيطة قبل الاتصال بخدمة هوفر المحلية لديك.

- هل تم توصيل المكنسة بمصدر كهربائي صالح؟ يرجى التحقق بتجربة جهاز كهربائى آخر.
- هل كيس الغبار ممتلئ بالكامل؟ يرجى الرجوع إلى " صيانة المكنسة ".
- هل الفلتر مسدود؟ يرجى الرجوع إلى " تنظيف الفلتر ".
- هل الخرطوم أو الفوهة مسدودة؟ يرجى الرجوع إلى " إزالة انسداد من النظام ".
- هل يوجد حرارة زائدة بالمكنسة؟ إذا كان الأمر كذلك، يستغرق الأمر حوالي 30 دقيقة لإعادة الضبط تلقائيًا.