TORNADO

LED PRODUCT
OPERATION MANUAL

Series

EL8250E -A

Thanks for choosing Tornado LED Product

This brand **TORNADO** is a private trademark of ELARABY company

ELARABY

19319 www.elarabygroup.com
Tornado

ERTEMKX14010

Table of Contents

Chapter 1: Introduction

Precautions 2
- Product 2
- Power and Plug 2
- Power Cord and Signal Cable 2
- Use Environment 2
- Cleaning 2
- Hanging the Apparatus on the Wall 2
- Batteries 2

Buttons on the Apparatus 3
Sockets 3
Remote Control Functions 4

Chapter 2: Connections and Setup

Switching On 5
Switching Off 5

Chapter 3: General Operation

Menu Function 6
- Picture 6
- Sound 6
- Option 6
- Channel 6
- PC Setting 6
- Time 6
- USB 7

Chapter 4: Advanced Functions

Attention and Frequently Asked Questions 8
Reference section 8

Chapter 5: Other Information

Troubleshooting 9
Base Installation 9
Accessories 9

Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the apparatus screen.
- Do not impact the apparatus screen with hard pressure as this may damage the apparatus screen severely.

Power and Plug

- Unplug the set under the following conditions:
  - If the set will not be used for a long period of time.
  - If the power cord or the power outlet/plug is damaged.
  - Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
  - If the set is subject to impact or has been dropped to have the cabinet damaged.
- Where the mains plug or an appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.

Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

Use Environment

- Do not place the set on an unstable cart, stand or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp and cold areas. Protect the set from overheating.
- Keep the set away from direct sunlight.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids such as vases shall be placed on the apparatus.
- Do not use the set near dust place.

Cleaning

- Dust the set by wiping the screen and the cabinet with soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the apparatus screen.

Hanging the Apparatus on the Wall

Warning: This operation requires two people.
To ensure a safe installation, observe the following safety notes:

- Check that the wall can support the weight of the apparatus set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The apparatus must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the apparatus cables are placed so that there is not danger of tripping over them.

All other safety instructions about our apparatuses are also applicable here.

Warning: To prevent injury,this apparatus must be securely attached to a stable surface/ wall in accordance with the installation instructions Install the TV in a horizontal, stable location .

- To secure the TV,use a sturdy strap from the hook(s) on the rear of the tv to a wall stud,pillar or other inmmovable structure .make sure the strap is tight, secure, and parallel to the floor

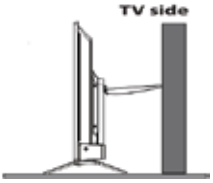

Batteries

- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Remove batteries when the remote control is not to be used for a long time. Batteries left in equipment may cause damage through deterioration and corrosive leakage, invalidating the guarantee.
- Risk of explosion if batteries are replaced by an incorrect type. Replace only with the same or equivalent type recommended by the equipment manufacturer.
- To protect the environment use local recycling facilities for battery disposal. Dispose of used batteries according to the instructions.

Buttons on the Apparatus

Note: The location and names of the function buttons on the apparatus may vary according to apparatus model.

32EL8250E -A

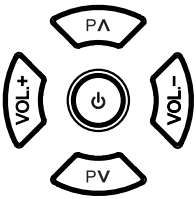

⏻ button

- The apparatus is on On mode
  - Short press it to display **Menu**
  - Long press it for five seconds to turning the apparatus to Standby mode.
- The apparatus is on Standby mode
  - Press it for turning the apparatus to On mode.

P∧\∨ button

Navigates up/down through the channel list.
In the menu system, they act like the up/down direction buttons on the remote and adjust menu controls.

VOL.+\- button

Increases/decreases the volume.
In the menu system, they act like the right/left direction buttons on the remote and adjust menu controls.

43EL8250E -A

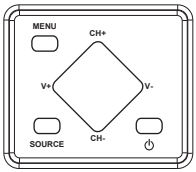

MENU button

Press it to display menu.

CH+\- button

Navigates up/down through the channel list.
In the menu system, they act like the up/down direction buttons on the remote and adjust menu controls.

V+\- button

Increases/decreases the volume.
In the menu system, they act like the right/left direction buttons on the remote and adjust menu controls.

SOURCE button

Press it to change input source.

⏻ button

- The apparatus is on On mode
  - Press it for turning the apparatus to Standby mode.
- The apparatus is on Standby mode
  - Press it for turning the apparatus to On mode.

Sockets

Note: The location and names of the sockets on the apparatus may vary according to apparatus model and some sockets may not available for some models.

HDMI (High-Definition Multimedia Interface)

This socket can be used to connect a device such as Blu-ray player with a HDMI output for best picture quality. It also provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.

VGA (PC)

This socket can be used to connect a computer.
Note: The VGA is same as the PC.

PC AUDIO IN

This socket can be used to connect a computer audio.

Component (YPBPR)

This socket can be used to connect a device such as DVD recorders, satellite receivers or DVD players.

AV IN

This socket can be used to connect a device such as video recorders, camcorders, decoders, satellite receivers, DVD players or games consoles. It provides composite video connection.

ANT IN

This socket can be used to receive the signal from your antenna by using coaxial cable.

USB

This socket can be used to connect an USB device.

COAX

This socket can be used to connect a compatible digital audio receiver by using coaxial cable.

EARPHONE OUT

This socket can be used for connecting earphones to listen to the sound coming from the apparatus.
Note: Excessive sound pressure from earphones can cause hearing loss.

Remote Control Functions

Most of your apparatus's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

⏻	(POWER) Turn on/standby apparatus.
MUTE	Mute sound.
0-9	(Numeric Buttons) Enter channel numbers.
-/--	Enter channel number greater than 9.
⟲	Return to previous channel.
SOURCE	Change input source.
CH.LIST	Display channels list.
▲▼◀▶	up, down, left and right Move cursor. Highlights different items in the menu system and adjust the menu controls.
ENTER	Confirm selection.
MENU	Display menu.
EXIT	Exit from menu.
ASPECT	Select the desired screen format.
FREEZE	Freeze On/Off.
VOL+/-	Volume up and down.
FAV	Display favorite list.
P∧/∨	Scan up or down through the current channels list.
AUTO	Adjust automatically in PC mode.
PMODE	Select picture mode.
SMODE	Select sound mode.
SLEEP	Select sleep timer period
▶II	Play or pause current Media.
■	Stop current Media.
REPEAT	Adjust repeat mode.
USB	Enter to USB mode.
◀◀	Playing backward fast.
▶▶	Playing forward fast.
⏮	Play previous video, song, photo or text.
⏭	Play next video, song, photo or text.
Colored buttons	(Red/Green/Yellow/Blue) Performs the corresponding function indicated at the bottom of the screen.

Switching On

Follow the instructions on this page on how to switch on your apparatuse and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two AAA batteries in the remote control.
   Precautions on using batteries:
   - Only use the battery types specified.
   - Make sure you use the correct polarity.
   - Do not mix new and used batteries.
   - Do not use rechargeable batteries.
   - Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them as this could cause them to leak or explode.
   - Remove the batteries from the remote control if you are not using it for a long period of time.

2. Connect the power cable first to the apparatus then to a mains socket. Your apparatus set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, don't use it under any circumstances and don't connect it to a mains socket as there is a risk of electric shock.

3. Connect an outside aerial to the **ANTENNA** socket at the back of the TV set. The aerial socket (75 OHM - VHF / UHF / cable) can be used for connecting an external aerial or other equipment fitted.

4. When powered on, the apparatus will be turned on directly or be in standby. If the power indicator lights up red, the apparatus is in standby mode.
   Press the ⏻ button on the remote control or on the apparatus to turn on the apparatus.

Switching Off

- To put the apparatus into standby mode, press the ⏻ button on the remote control, on the apparatus (Available only for 43EL8250E -A) or long press on the apparatus for five seconds (Available only for 32EL8250E -A), the apparatus remains powered up but with low energy consumption.
- To switch off the apparatus, unplug the mains socket from the mains outlet.

Menu Functions

You can press the **MENU** button to enter the Main Menu. The Main Menu consists of the following menus:
• Picture
• Sound
• Option
• Channel
• PC Setting
• Time
Press the ▲▼ buttons to select a menu.
Press the **ENTER**/► button to enter the menu.
Press the ▲▼ buttons to select an item.
Press the ◄►▲▼ buttons to adjust the item.
Press the **MENU** button to return to previous menu.
Press the **EXIT** button to exit the menu.
Note: Some options may be not available for some sources and models.

Picture

Picture Mode
Select Picture Mode: Dynamic, Standard, Mild or User that best suits your viewing environment.
Contrast
Adjust the difference between the light and dark areas of the picture.
Brightness
Adjust the brightness of the picture.
Sharpness
Adjust the sharpness of the edges in the picture.
Color
Adjust the richness of color.
Tint
Adjust the balance between the red and green levels.
Note: This option is only available under NTSC mode.
Color Temperature
Select the Color Temperature mode: Standard, Warm, User or Cool.
Aspect Ratio
Select the desired screen format.
Noise Reduction
Select the Noise Reduction mode: Off, Low, Middle, or High.

Sound

Sound Mode
Select Sound Mode: Standard, Music, Movie, Sports or User.
Treble
Adjust Treble level.
Bass
Adjust Bass level.
Balance
Adjust the amount of audio sent to the left and right speakers.
Auto Volume
Select On to reduce the annoying blasts in volume during commercial breaks and also amplifies softer sounds in program material. Eliminates the need to constantly adjust the volume.
COAX Mode
Select COAX Mode: PCM, Auto or Off which is used to control the type of audio stream sent to Coaxial Digital Audio Output.

Option

OSD Language
Choose the on-screen display language
OSD Timer
Select OSD Timer period: 5S, 10S, 15S, 20S, 25S or 30S.
Blue Screen
Select On or Off to turn on or turn off this function.
Restore Default
Restore all settings to default.
Software Update (USB)
Update software by using USB.
Key Lock
Select On or Off to turn on or turn off this function.

Channel

Auto Tuning
Scan for all available analog channels.
ATV Manual Tuning
Scan for analog channel manually.
Programme Edit
Edit channels.

PC Setting

Adjust screen in PC mode.

Time

Sleep Timer
Select Sleep Timer period: Off, 10Min, 20Min, 30Min, 60Min, 90Min, 120Min, 180Min or 240 Min.
Auto Sleep
The apparatus will automatically turn to standby mode after Auto Sleep period: 3 Hours, 4 Hours, 5 Hours or Off, if you don't touch the buttons on the remote control or on apparatus.

USB

Your apparatus is fitted with USB connector that enables you to view pictures, listen to music or watch videos stored on USB drives.
When a USB device is connected
- Press **SOURCE** on the remote control, select **USB1** or **USB2** then press **ENTER** to enter the USB mode.
- Press **USB** on the remote control to enter the USB mode.

To exit USB mode
- Press **SOURCE** on the remote control, select any other source then press **ENTER** to confirm.

Photo
Use this function to display pictures, if available.
1. Use ◄/► to select **Photo** then press **ENTER** to confirm.
2. Use ▲/▼/◄/► to select a picture in either main or sub file content browser then press **ENTER** to watch and a slide show begins from the selected picture.
3. Press **ENTER** to display the console. Use ◄/► to select an option then press **ENTER** to confirm.
4. Press **EXIT** to return to the previous interface.

Music
Use this function to play back music, if available.
1. Use ◄/► to select **Music** then press **ENTER** to confirm.
2. Use ▲/▼/◄/► to select a song in either main or sub file content browser then press **ENTER** to play and automatic playback begins from the selected song.
3. Press **ENTER** to display the console. Use ◄/► to select an option then press **ENTER** to confirm.
4. Press **EXIT** to return to the previous interface.

Movie
Use this function to watch videos, if available.
1. Use ◄/► to select **Movie** then press **ENTER** to confirm.
2. Use ▲/▼/◄/► to select a video in either main or sub file content browser then press **ENTER** to watch and automatic playback begins from the selected video.
3. Press **ENTER** to display the console. Use ◄/► to select an option then press **ENTER** to confirm.
4. Press **EXIT** to return to the previous interface.

Text
Use this function to display texts, if available.
1. Use ◄/► to select **Text** then press **ENTER** to confirm.
2. Use ▲/▼/◄/► to select a text in either main or sub file content browser then press **ENTER** to display the selected text.
3. Press **ENTER** to display the console. Use ◄/► to select an option then press **ENTER** to confirm.
4. Press **EXIT** to return to the previous interface.

Attention and Frequently Asked Questions

Attention:

1. Some non-standard mobile storage device may not be recognized. Please change to use the standard device.
2. This system supports the following file formats:
   Movie format: AVI, MP4, MPG, MKV, MOV, DAT, VOB, RM & RMVB.
   Music format: MP3, WMA, M4A & AAC.
   Photo format: JPG, BMP & PNG.
   Text format: TXT.

Note: For coding files, there are many kinds nonstandard coding method, so this system can not be guaranteed to support the file formats using any coding method.

Frequently Asked Questions:

1. Under the following conditions, this system can't decode the file and the file can't be play normally:
   -The parameters of file, such as the pixel of picture, code rate of audio and video file or sampling rate of audio file exceed the limit of the system.
   -The format of file isn't matched or the file is harmed.
2. Hot plug: Don't disconnection when the system is reading or transmitting data to avoid damaging the system or the device.
3. Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera. If the power supply isn't sufficient or not stable, you may encounter problems during operating or can't operate at all. In this case, please restart the device or unplug the device and plug it again and ensure that its power supply is normal.
4. The system supports standard USB1.1 and USB2.0 devices such as standard USB disks, MP3 players, mobile hard disks and etc..
5. For obtaining better audio and video quality, suggests to use the external device which accords with USB2.0 standard.
6. When playing the video with high compression ratio, these phenomenons such as picture standstill and menu long time response are normal.
7. For some USB device with power supply such as large size hard disk, MP4 and etc., suggests using it with power to avoid electric power shortage.

Reference Section

32EL8250E -A	
Carton Dimensions (L*W*H) (mm)	826*118*518
Net Weight With Stand (Kg)	7.2
Gross Weight With Packaging (Kg)	8.4
Power Supply (V)	100 - 240
Power Consumption (TV On) (W)	65
Power Consumption (Standby) (W)	0.5
TV System	PAL, NTSC, SECAM
Sound Output Power (W)	2*8
Resolution	1366*768

43EL8250E -A	
Carton Dimensions (L*W*H) (mm)	1124*137*655
Net Weight With Stand (Kg)	11.8
Gross Weight With Packaging (Kg)	14.4
Power Supply (V)	100 - 240
Power Consumption (TV On) (W)	75
Power Consumption (Standby) (W)	0.5
TV System	PAL, NTSC, SECAM
Sound Output Power (W)	2*8
Resolution	1920*1080

Unbreakable Screen

Unbreakable Screen

This TV is supported with unbreakable screen that comes with below features:

1. Maintains Clear and High Definition picture
2. Supports protection for the LCD screen which can resist the impact of 0.5 Kg falling body from a distance of 1 m. Also, resist 100 Kg holding (compression) load for one minute
3. Fits flat-screen TV's with screen diagonal from 32 and 43 inch

Troubleshooting

Most problems you encounter with your apparatus can be corrected by consulting the following troubleshooting list.

No picture and no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

Remote control doesn't work

1. Change the batteries.
2. Batteries aren't installed correctly.
3. Main power isn't connected.

No picture and normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

Normal picture and no sound

1. Press the **Vol+** button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Blank screen in VGA mode

Perhaps the apparatus can not recognize the resolution set by the PC. Suggest to change to the best resolution or other standard resolutions of the Windows system.

Snowy dots and interference

If the antenna is located in the fringe area of the TV signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor or the outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

If the TV is crashed

1. Press the ⏻ button to turn off TV, then press the ⏻ button again to reset TV.
2. Unplug the power cord, then press the ⏻ button to reset TV.

Note: If these 2 methods can not be resolved, please contact the after-sales to solve.

Base Installation

Install the double support base on the apparatus by using screws.

Note: The below illustrations are for reference only and may differ from actual product appearance.

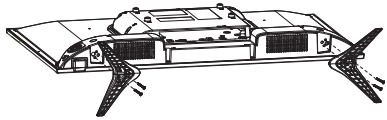

Accessories

The main accessories are

1. Operation Manual.
2. Remote Control.
3. Batteries.
4. Base.
5. Base Screws.

Note: The othe accessories may vary depending on the model and the region.

إستكشاف الأخطاء وإصلاحها

يمكن إصلاح معظم المشاكل التي تواجهها مع جهازك من خلال الرجوع إلى قائمة إستكشاف الأخطاء وإصلاحها التالية

لا توجد صورة ولا يوجد صوت

١. تأكد من أن الفيوز أوقاطع الكهرباء يعمل بشكل جيد.
٢. قم بتوصيل جهاز كهربائي آخر في منفذ التيار الكهربى لتأكد من أنه يعمل أو قيد التشغيل.
٣. كابل الطاقة متصل بطريقة غير صحيحة بمنفذ التيار الكهربى.
٤. تحقق من مصدر الإشارة.

لا يوجد ألوان

١. قم بتغيير نظام الألوان.
٢. ضبط مستوى درجة التشبع.
٣. جرب قناة أخرى. ربما يكون البرنامج الذى يتم إستقباله بالأبيض والأسود.

جهاز التحكم عن بعد لا يعمل

١. قم بتغيير البطاريات.
٢. لم يتم تركيب البطاريات بطريقة صحيحة.
٣. لم يتم توصيل مصدر الطاقة الرئيسى.

لا توجد صورة والصوت طبيعى

١. قم بضبط مستوى السطوع والتباين.
٢. ربما حدث فشل فى البث.

الصورة طبيعية ولا يوجد صوت

١. قم بالضغط على زر **+Vol** لزيادة مستوى الصوت.
٢. تم ضبط الصوت على كتم الصوت ، إضغط على زر كتم الصوت لإستعادة الصوت.
٣. قم بتغيير نظام الصوت.
٤. ربما حدث فشل فى البث.

تموجات غير منتظمة على الصورة

يحدث هذا عادةً بسبب التداخل المحلي، مثل السيارات، مصابيح الإضاءة ومجففات الشعر. إضبط الهوائي لتقليل التداخل.

شاشة فارغة في وضع VGA

ربما لم يتمكن الجهاز من التعرف على الدقة التى تم ضبط الكمبيوتر عليها. يقترح تغيير الدقة إلى دقة أفضل أو دقة قياسية أخرى لنظام Windows.

نقاط ثلجية وتداخل

إذا كان الهوائي موجوداً في منطقة على حدود إستقبال إشارة التليفزيون حيث تكون الإشارة ضعيفة، فقد تشوه الصورة بنقاط. عندما تكون الإشارة ضعيفة للغاية، قد يكون من الضروري تثبيت هوائي خاص لتحسين جودة الإستقبال.
١. قم بضبط إتجاه ووضع الهوائي الداخلى أو الخارجى
٢. تحقق من توصيل الهوائي.
٣. قم بالبحث الدقيق للقنوات.
٤. جرب قناة اخري . ربما حدث فشل في البث.

إشعال

تظهر بقع سوداء، خطوط أفقية أو الصورة غير ثابتة. ينتج هذا عادة بسبب التداخل الناتج عن نظام إشعال السيارة، مصابيح النيون، المثقاب الكهربى أو الأجهزة الكهربائية الأخرى.

شبح

تنشأ الأشباح من خلال مسارين لإشارة التليفزيون التاليين. واحد هو المسار المباشر، والآخر ينعكس من المباني العالية، التلال أو الأبنية المرتفعة الأخرى. قد يؤدي تغيير إتجاه أو وضع الهوائي إلى تحسين جودة الإستقبال.

تداخل تردد الراديو

ينتج عن هذا التداخل تموجات متحركة أو خطوط قطرية، وفي بعض الحالات، يتم فقدان التباين في الصورة. إبحث عن مصدر تداخل الراديو وتخلص منه.

إذا تم تعطل التليفزيون

١. إضغط على زر ⏻ لإيقاف تشغيل التليفزيون، إضغط عليه مرة أخرى لإعادة ضبط التليفزيون.
٢. إفصل كابل الطاقة، ثم إضغط على زر ⏻ لإعادة ضبط التليفزيون.

ملحوظة: إذا لم تتمكن من حل المشكلة بهاتين الطريقتين، برجاء الإتصال بخدمة ما بعد البيع لحلها.

تركيب القاعدة

قم بتثبيت القاعدتين على الجهاز بإستخدام المسامير.

ملحوظة: الرسوم التوضيحية أدناه هي للإشارة فقط وقد تختلف عن مظهر المنتج الفعلي.

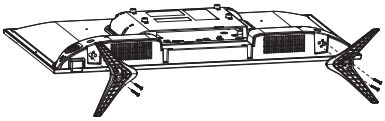

الملحقات

الملحقات الرئيسية هى
١. دليل التشغيل
٢. جهاز التحكم عن بعد
٣. البطاريات
٤. القاعدة
٥. مسامير القاعدة

ملحوظة: قد تختلف الملحقات الاخرى وفقاً لموديل الجهاز والمنطقة.

تنبيه وأسئلة متكررة

تنبيه:

١. قد لا يتم التعرف على بعض أجهزة التخزين الغير قياسية. برجاء إستخدام أجهزة تخزين قياسية.
٢. يدعم هذا النظام التنسيقات التالية:
تنسيق الفيلم: AVI، MP4، MPG، MKV، MOV، DAT، VOB، RM وRMVB.
تنسيق الموسيقى: MP3، WMA، M4A وAAC.
تنسيق الصور: JPG، BMP وPNG.
تنسيق النص: TXT.
ملاحظة: فيما يتعلق بترميز، توجد أنواع كثيرة من طرق الترميز الغير قياسية، لذلك لا يمكن أن يضمن هذا النظام دعم تنسيقات الملفات التى تستخدم أى طريقة ترميز.

أسئلة متكررة:

١. في ظل الظروف التالية ، يتعذر على هذا النظام فك تشفير الملف ويتعذر تشغيل الملف بشكل طبيعي:
- معلمات الملف، مثل بكسل الصورة، معدل ترميز ملف الصوت وملف الفيديو أو معدل أخذ العينات لملف الصوت، يتجاوز حد النظام.
- تنسيق الملف غير متوافق أو الملف تالف.
٢. التوصيل السريع: لا تفصل الجهاز أثناء قيام النظام بقراءة أو نقل البيانات لتجنب تلف النظام أو الجهاز.
٣. إنتبه لمصدر إمداد الجهاز بالطاقة عند إستخدام قرص ثابت متنقل أو كاميرا ديجيتال. إذا كان مصدر الإمداد بالطاقة غير كافٍ أو غير مستقر، فقد تواجه مشكلات أثناء التشغيل أو يتعذر التشغيل على الإطلاق. في هذه الحالة، برجاء إعادة تشغيل الجهاز أو فصل الجهاز وتوصيله مرة أخرى والتأكد من أن مصدر الإمداد بالطاقة يعمل بشكل طبيعي.
٤. يدعم النظام أجهزة USB1.1 وUSB2.0 القياسية مثل أقراص USB ومشغلات MP3 والأقراص الصلبة المحمولة وغيرها.
٥. للحصول على جودة صورة وصوت أفضل، يقترح إستخدام جهاز خارجي الذي يتوافق مع معيار USB2.0.
٦. عند تشغيل الفيديو بمعدل ضغط عالى، فإن هذه الظواهر مثل التوقف المؤقت للصورة ووقت الإستجابة الطويل للقائمة يكون طبيعياً .
٧. فيما يتعلق ببعض أجهزة USB التى تحتاج إلى مصدر إمداد بالطاقة مثل الأقراص الصلبة ذات الأحجام الكبيرة، MP4 وغيرها، يقترح إستخدامها مع مصدر طاقة لتجنب حدوث قصر فى الطاقة الكهربائية.

قسم المراجع

32EL8250E -A	
أبعاد الكرتونة (الطول*العرض*الإرتفاع) (مم)	٨٢٦*١١٨*٥١٨
الوزن الصافى بالقاعدة (كجم)	٧,٢
الوزن الإجمالى مع التغليف (كجم)	٨,٤
مصدر التيار الكهربى (فولت)	١٠٠ - ٢٤٠
إستهلاك الطاقة (فى حالة التشغيل) (وات)	٦٥
إستهلاك الطاقة (فى وضع الإستعداد) (وات)	٠,٥
نظام التليفزيون	SECAM ،NTSC ،PAL
قدرة خرج الصوت (وات)	٢*٨
الدقة	١٣٦٦*٧٦٨

43EL8250E -A	
أبعاد الكرتونة (الطول*العرض*الإرتفاع) (مم)	١١٢٤*١٣٧*٦٥٥
الوزن الصافى بالقاعدة (كجم)	١١,٨
الوزن الإجمالى مع التغليف (كجم)	١٤,٨
مصدر التيار الكهربى (فولت)	١٠٠ - ٢٤٠
إستهلاك الطاقة (فى حالة التشغيل) (وات)	٧٥
إستهلاك الطاقة (فى وضع الإستعداد) (وات)	٠,٥
نظام التليفزيون	SECAM ،NTSC ،PAL
قدرة خرج الصوت (وات)	٢*٨
الدقة	١٩٢٠*١٠٨٠

شاشة غير قابلة للكسر

Unbreakable Screen

هذا التلفزيون مدعوم بشاشة غير قابلة للكسر مزودة بميزات أدناه
١-يحافظ على صورة واضحة وعالية الدقة
٢-يدعم حماية شاشة lcd التى يمكن أن تقاوم تأثير سقوط الجسم ٠,٥ كجم من مسافة ١ متر.يقوم ضغط حمل ١٠٠كجم لمدة دقيقة واحدة
٣-يناسب تلفزيون بشاشة مسطحة مع شاشة قطرية من ٣٢ و٤٣ بوصة

USB

تم تزويد جهازك بمدخل USB الذى يمكّنك من عرض الصور، الإستماع إلى الموسيقى أو مشاهدة مقاطع الفيديو المخزنة على جهاز USB.

عندما يكون جهاز USB متصلاً

- إضغط على **SOURCE** الموجود على وحدة التحكم عن بعد، حدد **USB1** أو **USB2** ثم إضغط على **ENTER** للدخول إلى وضع USB.
- إضغط على **USB** الموجود على وحدة التحكم عن بعد للدخول إلى وضع **USB**.

للخروج من وضع USB

- إضغط على **SOURCE** الموجود على وحدة التحكم عن بعد، حدد أى مصدر دخل أخر ثم إضغط على **ENTER** للتاكيد.

الصور

إستخدم هذه الوظيفة لعرض الصور، إذا كانت متوفرة.

١. إستخدم ◄/◄ لتحديد **الصورة** ثم إضغط على **ENTER** للتأكيد.
٢. إستخدم ▲/▼/►/◄ لإختيار صورة في مستعرض محتويات إما الملف الرئيسي أو الملف الفرعي ثم إضغط على **ENTER** للمشاهدة ويبدأ عرض الشرائح من الصورة التى تم إختيارها.
٣. إضغط على **ENTER** لعرض وحدة التحكم. إستخدم ►/◄ لتحديد الخيار ثم إضغط على **ENTER** للتأكيد.
٤. إضغط على **EXIT** للرجوع إلى الواجهة السابقة.

الموسيقى

إستخدم هذه الوظيفة لتشغيل الموسيقى، إذا كانت متوفرة.

١. إستخدم ►/◄ لتحديد **الموسيقى** ثم إضغط على **ENTER** للتأكيد.
٢. إستخدم ▲/▼/►/◄ لإختيار أغنية في مستعرض محتويات إما الملف الرئيسي أو الملف الفرعي ثم إضغط على **ENTER** لتشغيل ويبدأ التشغيل التلقائى من الأغنية التى تم إختيارها.
٣. إضغط على **ENTER** لعرض وحدة التحكم. إستخدم ►/◄ لتحديد الخيار ثم إضغط على **ENTER** للتأكيد.
٤. إضغط على **EXIT** للرجوع إلى الواجهة السابقة.

الفيلم

إستخدم هذه الوظيفة لمشاهدة مقاطع الفيديو، إذا كانت متوفرة.

١. إستخدم ►/◄ لتحديد **الفيلم** ثم إضغط على **ENTER** للتأكيد.
٢. إستخدم ▲/▼/►/◄ لإختيار مقطع فيديو في مستعرض محتويات إما الملف الرئيسي أو الملف الفرعي ثم إضغط على **ENTER** لتشغيل ويبدأ التشغيل التلقائى من الفيديو الذى تم إختياره.
٣. إضغط على **ENTER** لعرض وحدة التحكم. إستخدم ►/◄ لتحديد الخيار ثم إضغط على **ENTER** للتأكيد.
٤. إضغط على **EXIT** للرجوع إلى الواجهة السابقة.

النص

إستخدم هذه الوظيفة لعرض النصوص، إذا كانت متوفرة.

١. إستخدم ►/◄ لتحديد **النص** ثم إضغط على **ENTER** للتأكيد.
٢. إستخدم ▲/▼/►/◄ لإختيار نص في مستعرض محتويات إما الملف الرئيسي أو الملف الفرعي ثم إضغط على **ENTER** لعرض النص الذى تم إختياره.
٣. إضغط على **ENTER** لعرض وحدة التحكم. إستخدم ►/◄ لتحديد الخيار ثم إضغط على **ENTER** للتأكيد.
٤. إضغط على **EXIT** للرجوع إلى الواجهة السابقة.

قائمة الوظائف

يمكنك الضغط على زر **MENU** للدخول إلى القائمة الرئيسية. تتكون القائمة الرئيسية من القوائم التالية

- الصورة
- الصوت
- الخيارات
- القناة
- الشاشة
- الوقت

إضغط على الأزرار ▲ ▼ لتحديد قائمة.
إضغط على زر **ENTER**/◄ للدخول إلى القائمة.
إضغط على الأزرار ▲ ▼ لتحديد عنصر.
إضغط على الأزرار ▲ ▼ ► ◄ لضبط العنصر.
إضغط على زر **MENU** للرجوع إلى القائمة السابقة.
إضغط على زر **EXIT** للخروج من القائمة.
ملاحظة: قد لا تتوفر بعض الخيارات لبعض المداخل والموديلات.

الصورة

أوضاع الصورة
حدد أوضاع الصورة: ديناميكى، قياسى، معتدل أو المستخدم الذى يتناسب مع بيئة المشاهدة الخاصة بك.
التباين
ضبط الفرق بين مناطق الضوء والظلام في الصورة.
السطوع
ضبط سطوع الصورة.
الحدة
ضبط حدة حدود الصورة.
اللون
ضبط ثراء اللون.
التظليل
ضبط التوازن بين مستويات الأحمر والأخضر.
ملاحظة: هذا الخيار متاح فقط فى وضع NTSC.
درجة الألوان
حدد وضع حرارة اللون: قياسى، دافئ، المستخدم أو بارد.
أبعاد الصورة
حدد تنسيق الشاشة الذى تريده.
تخفيف الضوضاء
حدد وضع تقليل الضوضاء: إيقاف، منخفض، متوسط أو مرتفع.

الصوت

أوضاع الصوت
حدد أوضاع الصوت: قياسى، موسيقى، فيلم، رياضة أو المستخدم.
عالى الطبقة
ضبط مستوى عالى الطبقة.
جهير
ضبط مستوى الجهير.
توازن
ضبط مقدار الصوت المرسل إلى السماعات اليمنى واليسرى.
مستوى الصوت التلقائى
حدد تشغيل لتقليل أصوات الصفير المزعجة أثناء الفواصل الإعلانية وأيضاً يكبر الأصوات الضعيفة لمادة البرنامج. يلغي الحاجة إلى ضبط الصوت بإستمرار.
وضع COAX
حدد وضع COAX: PCM، تلقائى أو إيقاف الذي يستخدم للتحكم في نوع البث الصوتي المرسل إلى خرج الصوت الديجيتال المتحد المحور.

الخيارات

لغة العرض على الشاشة
إختر لغة العرض على الشاشة.
مدة عرض القائمة
حدد فترة مدة عرض القائمة: ٥ ثوانى، ١٠ ثوانى، ١٥ ثانية، ٢٠ ثانية، ٢٥ ثانية أو ٣٠ ثانية.
الشاشة الزرقاء
حدد تشغيل أو إيقاف لتشغيل أو إيقاف تشغيل هذه الوظيفة.
إعادة ضبط المصنع
إستعادة جميع الإعدادات الإفتراضية.
تحديث البرامج (USB)
تحديث السوفت وير عن طريق USB.
قفل لوحة المفاتيح
حدد تشغيل أو إيقاف لتشغيل أو إيقاف تشغيل هذه الوظيفة.

القناة

بحث تلقائى
يتيح لك البحث عن جميع قنوات الأنالوج المتاحة.
بحث يدوى
يتيح لك البحث عن قناة أنالوج يدوياً.
تعديل القنوات
يتيح لك تعديل القنوات.

الشاشة

ضبط الشاشة فى وضع PC.

الوقت

موقت النوم
حدد فترة موقت النوم: إيقاف، ١٠ دقيقة، ٢٠ دقيقة، ٣٠ دقيقة، ٦٠ دقيقة ٩٠ دقيقة، ١٢٠ دقيقة، ١٨٠ دقيقة أو ٢٤٠ دقيقة.
إطفاء تلقائى
سيتحول الجهاز تلقائيًا إلى وضع الإستعداد بعد فترة الإطفاء التلقائي: ٣ ساعات ، ٤ ساعات ، ٥ ساعات أو إيقاف ، إذ لم تقم بلمس الأزرار الموجودة على جهاز التحكم عن بعد أو على الجهاز.

التشغيل

إتبع الإرشادات الواردة في هذه الصفحة حول كيفية تشغيل الجهاز وجهاز التحكم عن بعد قبل الإنتقال إلى الصفحات التالية التي تصف كيفية إجراء إعداد القناة.

١. أدخل بطاريتين AAA في جهاز التحكم عن بعد
الإحتياطات الخاصة بإستخدام البطاريات
- إستخدم أنواع بطاريات محددة.
- تأكد من إستخدام الإتجاه الصحيح للبطاريات.
- لا تقم بخلط البطاريات الجديدة بالمستعملة.
- لا تستخدم البطاريات القابلة لإعادة الشحن.
- لا تعرض البطاريات للحرارة الزائدة مثل أشعة الشمس، النار أو ما شابه ذلك أو رميها في النار، إعادة شحنها أو محاولة فتحها لأن ذلك قد يؤدي إلى تسريبها أو إنفجارها.
- قم بإزالة البطاريات من وحدة التحكم عن بعد إذا لم تستخدمها لفترة طويلة.

٢. قم بتوصيل كابل الطاقة أولاً بالجهاز ثم إلى منفذ التيار الكهربائي. يجب توصيل الجهاز الخاص فقط بمصدر تيار متردد. يجب ألا يتم توصيله بمصدر تيار مستمر. إذا كان الفيشة مفصولة عن الكابل، فلا تستخدمه تحت أي ظرف من الظروف ولا تقم بتوصيله بمنفذ تيار كهربى لأن هناك خطر حدوث صدمة كهربائية.

٣. قم بتوصيل الهوائى الخارجى بمدخل ANTENNA في الجزء الخلفي من التليفزيون. يمكن إستخدام مدخل الهوائي (٧٥ أوم - VHF / UHF / كابل) لتوصيل هوائي خارجي أو معدات أخرى.

٤. عند توصيل كابل الطاقة، سيتم تشغيل الجهاز مباشرة أو يكون في وضع الإستعداد. إذا كان مؤشر الطاقة يضيء باللون الأحمر ، فإن هذا يعنى أن الجهاز في وضع الإستعداد. إضغط على زر ⏻ الموجود على جهاز التحكم عن بعد أو على الجهاز لتشغيل الجهاز.

إيقاف التشغيل

- لوضع الجهاز في وضع الاستعداد، إضغط على زر ⏻ الموجود على الجهاز التحكم عن بعد، على الجهاز (متاح فقط لـ 43EL8250E -A) أو على جهاز الجهاز لفترة طويلة لمدة خمس ثوانى (متاح فقط لـ 32EL8250E -A)، يبقى الجهاز بالطاقة ولكن مع إنخفاض إستهلاك الطاقة .
- لإيقاف تشغيل الجهاز، قم بفصل كابل الطاقة من منفذ التيار الكهربى.

وظائف جهاز التحكم عن بعد

تتوفر معظم وظائف جهازك عبر القوائم التي تظهر على الشاشة. يمكنك إستخدام جهاز التحكم عن بعد المرفق مع جهازك للتنقل عبر القوائم وتهيئة كافة الإعدادات العامة.

⏻	(الطاقة) تشغيل الجهاز/ضبطه على وضع الإستعداد.
MUTE	كتم الصوت.
0-9	(أزرار الأرقام) أدخل أرقام القنوات.
-/--	إدخال رقم قناة أكبر من ٩.
⟲	الرجوع إلى القناة السابقة.
SOURCE	تغيير مصدر الدخل.
CH.LIST	عرض قائمة القنوات.
▲▼◀▶	تحرك المؤشر لأعلى، لأسفل، لليسار ولليمين. تحدد بنود مختلفة في نظام القائمة وتضبط عناصر التحكم في القائمة.
ENTER	تأكيد الإختيار.
MENU	عرض القائمة.
EXIT	الخروج من القائمة.
ASPECT	حدد حجم الشاشة الذى تريده
FREEZE	تشغيل/إيقاف تشغيل خاصية تجميد الصورة.
VOL+/-	زيادة وخفض مستوى الصوت.
FAV	عرض قائمة المفضلة.
P ∧/∨	التنقل لأعلى أو لأسفل عبر قائمة القنوات الحالية.
AUTO	ضبط تلقائياً فى وضع PC.
PMODE	تحديد وضع الصورة.
SMODE	تحديد وضع الصوت.
SLEEP	تحديد فترة مؤقت النوم.
▶II	تشغيل أو إيقاف مؤقت للوسائط الحالية.
■	إيقاف الوسائط الحالية.
REPEAT	ضبط وضع التكرار.
USB	الدخول إلى وضع USB.
◀◀	تشغيل إلى الخلف بسرعة.
▶▶	تشغيل إلى الأمام بسرعة.
⏮	تشغيل مقطع الفيديو، الأغنية، الصورة أو النص السابق.
⏭	تشغيل مقطع الفيديو، الأغنية، الصورة أو النص التالى.
Colored buttons	(أحمر/أخضر/أصفر/أزرق) ينفذ الوظيفة المقابلة المشار إليها في الجزء السفلي من الشاشة.

أزرار على الجهاز

ملحوظة: قد يختلف موقع وأسماء أزرار الوظائف على الجهاز وفقاً لموديل الجهاز.

32EL8250E -A

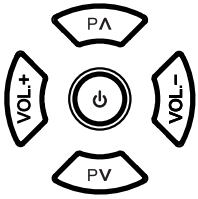

زر ⏻
- الجهاز في وضع التشغيل
  - إضغط عليه لفترة قصيرة لإظهار **القائمة**.
  - إضغط عليه لفترة طويلة لمدة خمس ثوانى لتحويل الجهاز إلى وضع الاستعداد.
- الجهاز في وضع الإستعداد
  - إضغط عليه لتحويل الجهاز إلى وضع التشغيل.

زر P∧\∨

يتنقل لأعلى/لأسفل فى قائمة القنوات.

فى نظام القائمة، يؤدى دور أزرار الإتجاه لأعلى/لأسفل الموجودة على وحدة التحكم عن بعد وتضبط عناصر التحكم فى القائمة.

زر VOL.+\-

يزيد/يخفض مستوى الصوت.

فى نظام القائمة، يؤدى دور أزرار الإتجاه لليمين/لليسار الموجودة على وحدة التحكم عن بعد وتضبط عناصر التحكم فى القائمة.

43EL8250E -A

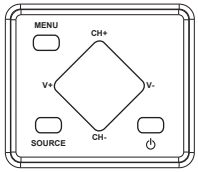

زر MENU

إضغط عليه لعرض القائمة.

زر CH+\-

يتنقل لأعلى/لأسفل فى قائمة القنوات.

فى نظام القائمة، يؤدى دور أزرار الإتجاه لأعلى/لأسفل الموجودة على وحدة التحكم عن بعد وتضبط عناصر التحكم فى القائمة.

زر V+\-

يزيد/يخفض مستوى الصوت.

فى نظام القائمة، يؤدى دور أزرار الإتجاه لليمين/لليسار الموجودة على وحدة التحكم عن بعد وتضبط عناصر التحكم فى القائمة.

زر SOURCE

إضغط عليه لتغيير مصدر الدخل.

زر ⏻
- الجهاز في وضع التشغيل
  - إضغط عليه لتحويل الجهاز إلى وضع الاستعداد.
- الجهاز في وضع الإستعداد
  - إضغط عليه لتحويل الجهاز إلى وضع التشغيل.

المداخل

ملحوظة: قد يختلف موقع وأسماء المداخل على الجهاز وفقاً لموديل الجهاز وقد لا تتوفر بعض المداخل لبعض الموديلات .

HDMI (واجهة الوسائط المتعددة عالية الدقة)

يمكن إستخدام هذا المدخل لتوصيل جهاز مثل مشغل Blu-ray مع مخرج HDMI للحصول على أفضل جودة للصورة. كما يوفر إتصال ديجيتال غير مضغوط يحمل كل من بيانات الصورة والصوت عن طريق كابل مدمج صغير.

VGA (PC)

يمكن إستخدام هذا المدخل لتوصيل الجهاز بالكمبيوتر.

ملحوظة: VGA يماثل PC.

PC AUDIO IN

يمكن إستخدام هذا المدخل لتوصيل صوت الكمبيوتر.

Component (YPBPR)

يمكن إستخدام هذا المدخل لتوصيل جهاز مثل مسجلات DVD، أجهزة إستقبال الأقمار الصناعية أو مشغل DVD.

AV IN

يمكن إستخدام هذا المدخل لتوصيل جهاز مثل مسجلات الفيديو، وكاميرات الفيديو، وأجهزة فك التشفير، وأجهزة إستقبال الأقمار الصناعية، مشغل DVD أو وحدات التحكم بالألعاب. ويوفر توصيل الفيديو المركب.

ANT IN

يمكن إستخدام هذا المدخل لإستقبال الإشارة من الهوائي الخاص بك بإستخدام كابل متحد المحور.

USB

يمكن إستخدام هذا المدخل لتوصيل جهاز USB.

COAX

يمكن إستخدام هذا المدخل لتوصيل مستقبل صوت ديجيتال متوافق بإستخدام كابل متحد المحور.

EARPHONE OUT

يمكن إستخدام هذا المدخل لتوصيل سماعات الأذن للإستماع إلى الصوت القادم من الجهاز.

ملحوظة: قد يؤدى ضغط الصوت الزائد من سماعات الأذن إلى فقدان السمع.

الإحتياطات

برجاء قراءة جميع الإرشادات قبل تشغيل الجهاز. حافظ على هذه الإرشادات جيداً لإستخدامها فى المستقبل.

المنتج

- لا تسد فتحات التهوية الموجودة على الغطاء الخلفى للجهاز أو تغطيها.
- لا تدفع أشياء من أى نوع إلى داخل الجهاز من خلال فتحات الغطاء الخلفى حيث قد تلامس أجزاء توصيل التيار أو أجزاء من دائرة القصر، مما ينتج عنه نشوب حريق، التعرض لصدمة كهربائية أو حدوث تلف بالجهاز.
- لا تحاول فتح الغطاء الخلفى حيث قد يؤدى ذلك إلى حدوث تلف. لا توجد أى أجزاء داخل الجهاز يمكنك إصلاحها بنفسك. برجاء الرجوع إلى موظف صيانة مؤهل لإجراء جميع أعمال الصيانة.
- لا تلمس سطح الشاشة بأصابعك حيث قد يؤدى ذلك إلى خدشها أو ظهور علامات على شاشة الجهاز.
- لا تقوم بالضغط على شاشة الجهاز حيث قد يؤدى ذلك إلى تلف شاشة الجهاز بشدة.

الطاقة والتوصيل

- إفصل الجهاز فى ظل الظروف التالية:
  - عند عدم إستخدام الجهاز لفترة زمنية طويلة.
  - عند تلف كابل الطاقة أو مدخل / مخرج الطاقة.
  - إتبع الإرشادات لتركيب وضبط الجهاز. إضبط وحدات التحكم التى يتم الإشارة إليها فى تعليمات التشغيل حيث قد يؤدى الضبط غير الصحيح لوحدات التحكم إلى حدوث تلف للجهاز. عند حدوث ذلك، إفصل الجهاز وقم بالرجوع إلى موظف الصيانة.
  - إذا حدث صدمة للجهاز أو سقط مما أدى إلى تلف الغطاء الخلفى.
- عند إستخدام مدخل التيار الكهربى أو الأجهزة المقترنة كجهاز فصل، يجب أن يظل جاهزاً للتشغيل بسرعة.

كابل الطاقة وكابل الإشارة

- لا تسمح بوضع أى شئ على كابل الطاقة وكابل الإشارة أو لفهما.
- أحمى كابل الطاقة وكابل الإشارة من أن يداس عليهم.
- لا تزيد الحمل على كابل الطاقة أو منفذ الطاقة.
- لا تعرض كابل الطاقة وكابل الإشارة للرطوبة.

بيئة الإستخدام

- لا تضع الجهاز على عربة، حامل أو منضدة غير مستقرة.
- قم بوضع الجهاز فى مكان يسمح بالتهوية الجيدة له.
- لا تستخدم الجهاز بالقرب من المناطق الرطبة والباردة. أحمى الجهاز من الحرارة الزائدة.
- أحفظ الجهاز بعيداً عن ضوء الشمس المباشر.
- لا يجب أن يتعرض الجهاز لتقطير المياة أو رشها ولا يجب وضع أشياء ممتلئة بالسوائل مثل الزهريات على الجهاز.
- لا تستخدم الجهاز فى بيئات بها غبار أو أتربة.

التنظيف

- أزل الغبار من على الجهاز من خلال مسح الشاشة والغطاء الخلفى بإستخدام قطعة قماش ناعمة ونظيفة أو بعض المنظفات السائلة الخاصة.
- لا تضغط بشدة على الشاشة أثناء التنظيف.
- لا تستخدم الماء أو منظفات كيميائية أخرى لتنظيف الشاشة حيث قد يؤدى ذلك إلى تلف سطح شاشة الجهاز.

تعليق الجهاز على الحائط

تحذير: تتطلب هذه الوظيفة شخصين

لتأكد من التركيب السليم. إتبع ملاحظات السلامة التالية:

- تحقق من أن الحائط يتحمل وزن الجهاز وحامل التركيب على الحائط.
- إتبع تعليمات التركيب الموجودة مع حامل التركيب على الحائط.
- يجب تركيب الجهاز رأسياً على الحائط.
- تأكد من إستخدام المسامير المناسبة لمادة الحائط.
- تأكد من وضع كابلات الجهاز فى أماكنها لتجنب خطر تعثرها.

كما تطبق جميع تعليمات السلامة الأخرى الخاصة بالجهاز هنا.

تحذير: لمنع الاصابة ، وهذا الجهاز يجب أن يعلق بشكل آمن على سطح مستقر / الجدار وفقا لتعليمات التثبيت

قم بتثبيت التلفزيون في مكان أفقي ومستقر

لتأمين التلفزيون ، استخدم حزامًا قويًا من الخطاف على الجزء الخلفي من التلفزيون وصولاً الى أى وتد عمود بالحائط أو للربط بأى هيكل آخر ثابت

تأكد من ربط الحزام ومن توازيه مع الارضية

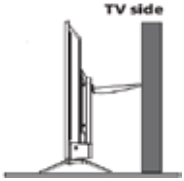

البطاريات

- يجب ألا تعرض البطاريات للحرارة الزائدة مثل ضوء الشمس، النار أو ما شابه ذلك.
- أزل البطاريات من وحدة التحكم عن بعد عند عدم إستخدامه لفترة طويلة. قد يسبب ترك البطاريات فى وحدة التحكم عن بعد إلى حدوث التلف من خلال التدهور والتسريب المسبب للتآكل، مما يؤدى إلى إبطال الضمان.
- قد يؤدى إستبدال البطاريات بنوع غير صحيح إلى التعرض لخطر الإنفجار. إستبدل البطاريات ببطاريات من نفس النوع أو بنوع مماثل توصى به الشركة المصنعة للجهاز.
- لحماية البيئة إستخدم مرافق إعادة التدوير المحلية للتخلص من البطاريات. تخلص من البطاريات المستعملة وفقًا للتعليمات.

جدول المحتويات

الفصل ١: المقدمة

الإحتياطات ٢
- المنتج ٢
- الطاقة والتوصيل ٢
- كابل الطاقة وكابل الإشارة ٢
- بيئة الإستخدام ٢
- التنظيف ٢
- تعليق الجهاز على الحائط ٢
- البطاريات ٢

أزرار على الجهاز ٣
المداخل ٣
وظائف جهاز التحكم عن بعد ٤

الفصل ٢: التوصيلات والإعداد

التشغيل ٥
إيقاف التشغيل ٥

الفصل ٣: التشغيل العام

قائمة الوظائف ٦
- الصورة ٦
- الصوت ٦
- الخيارات ٦
- القناة ٦
- الشاشة ٦
- الوقت ٦
- USB ٧

الفصل ٤: وظائف متقدمة

تنبيه وأسئلة متكررة ٨
قسم المراجع ٨

الفصل ٥: معلومات أخرى

إستكشاف الأخطاء وإصلاحها ٩
تركيب القاعدة ٩
الملحقات ٩

TORNADO

سلسلة

EL8250E -A

دليل التشغيل
منتج ليد

شكراً لإختيارك منتج ليد تورنيدو

هذه العلامة **تورنيدو** هى علامة تجارية مسجلة خاصة بشركة العربى

ELARABY

19319 www.elarabygroup.com
Tornado

ERTEMKX14010